

JETAIR SUPPORT, INC

CAPABILITY LIST CFM56

<http://www.jetairsupport.com>

Part Number	Description	Chapter	Effectivity
1277M55G01	Shroud Air Impigement Manifold-HPT	72-53-05	CFM56-3
1277M91G01	HPC Inner Shroud, 3rd Stage	72-32-07	CFM56-3
1277M91G03	HPC Inner Shroud, 3rd Stage	72-32-07	CFM56-3
1277M91G05	HPC Inner Shroud, 3rd Stage	72-32-07	CFM56-3
1282M34P02	HPT Rotor Front Shaft	72-52-04	CFM56-3
1282M71P01	HPT Rotor Front Shaft	72-52-04	CFM56-3
1282M72P05	Seal-Air, HPT Front	72-52-03	CFM56-3
1358M63G01	HPC Inner Shroud, 1st Stage	72-32-07	CFM56-3
1358M63G03	HPC Inner Shroud, 2nd Stage	72-32-07	CFM56-3
1358M63G07	HPC Inner Shroud, 3rd Stage	72-32-07	CFM56-3
1385M90P01	HPT Rotor Front Shaft	72-52-04	CFM56-3
1385M90P04	HPT Rotor Front Shaft	72-52-04	CFM56-3
1441M26P02	HPT Rotor Front Shaft	72-52-04	CFM56-3
1441M26P03	HPT Rotor Front Shaft	72-52-04	CFM56-3
1475M29P01	HPT Rotor Disk	72-52-02	CFM56-3
1475M29P02	HPT Rotor Disk	72-52-02	CFM56-3
1558M92G01	Compressor Rear Stator Support	72-41-07	CFM56-3
1558M92G02	Compressor Rear Stator Support	72-41-07	CFM56-3
158M63G03	HPC Inner Shroud, 2nd Stage	72-32-07	CFM56-3
301-287-119-0	Stationary Air/Oil Seal - Config. 1	72-22-11	CFM56-3
301-297-810-0	No. 1 Bearing Sleeve	72-22-12	CFM56-3
301-297-812-0	No. 1 Bearing Sleeve	72-22-12	CFM56-3
301-321-242-0	No. 5 Bearing Support	72-56-02	CFM56-3
301-321-253-0	No. 5 Bearing Support	72-56-02	CFM56-3
301-321-258-0	No. 5 Bearing Support	72-56-02	CFM56-3
301-321-259-0	No. 5 Bearing Support	72-56-02	CFM56-3
301-321-612-0	Midstream Fairing	72-56-04	CFM56-3
301-330-046-0	LPT Shaft	72-55-01	CFM56-3
301-330-047-0	LPT Shaft	72-55-01	CFM56-3
301-330-061-0	LPT Shaft	72-55-01	CFM56-3
301-330-065-0	LPT Shaft	72-55-01	CFM56-3
301-330-066-0	LPT Shaft	72-55-01	CFM56-3
301-330-067-0	LPT Shaft	72-55-01	CFM56-3
301-330-618-0	LPT Stub Shaft	72-55-02	CFM56-3
301-330-619-0	LPT Stub Shaft	72-55-02	CFM56-3
301-330-623-0	LPT Stub Shaft	72-55-02	CFM56-3
301-330-624-0	LPT Stub Shaft	72-55-02	CFM56-3
301-330-626-0	LPT Stub Shaft	72-55-02	CFM56-3
301-330-811-0	Rear Rotating Air Seal	72-55-04	CFM56-3
301-330-814-0	Rear Rotating Air Seal	72-55-04	CFM56-3
301-330-908-0	Rear Rotating Air/Oil Seal	72-55-04	CFM56-3
301-330-909-0	Rear Rotating Air/Oil Seal	72-55-04	CFM56-3
301-331-121-0	Disk-LPT Stg. 1	72-54-03	CFM56-3
301-331-124-0	Disk-LPT Stg. 1	72-54-03	CFM56-3
301-331-125-0	Disk-LPT Stg. 1	72-54-03	CFM56-3
301-331-126-0	Disk-LPT Stg. 1	72-54-03	CFM56-3
301-331-127-0	Disk-LPT Stg. 1	72-54-03	CFM56-3
301-331-221-0	Disk-LPT Stg. 2	72-54-03	CFM56-3
301-331-224-0	Disk-LPT Stg. 2	72-54-03	CFM56-3
301-331-225-0	Disk-LPT Stg. 2	72-54-03	CFM56-3
301-331-226-0	Disk-LPT Stg. 2	72-54-03	CFM56-3

JETAIR SUPPORT, INC.

CAPABILITY LIST

CFM56

301-331-227-0	Disk-LPT Stg. 2	72-54-03	CFM56-3
301-331-318-0	Disk-LPT Stg. 3	72-54-03	CFM56-3
301-331-321-0	Disk-LPT Stg. 3	72-54-03	CFM56-3
301-331-322-0	Disk-LPT Stg. 3	72-54-03	CFM56-3
301-331-419-0	Disk-LPT Stg. 4	72-54-03	CFM56-3
301-331-425-0	Disk-LPT Stg. 4	72-54-03	CFM56-3
301-331-427-0	Disk-LPT Stg. 4	72-54-03	CFM56-3
301-331-429-0	Disk-LPT Stg. 4	72-54-03	CFM56-3
301-334-416-0	No. 4 Bearing Fwd Rotating Oil Seal	72-55-14	CFM56-3
301-334-417-0	No. 4 Bearing Fwd Rotating Oil Seal	72-55-14	CFM56-3
301-350-234-0	Cover, Oil-Inlet	72-56-06	CFM56-3
301-350-235-0	Cover, Oil-Inlet	72-56-06	CFM56-3
301-350-238-0	Cover, Oil-Inlet	72-56-06	CFM56-3
301-350-239-0	Cover, Oil-Inlet	72-56-06	CFM56-3
301-350-240-0	Cover, Oil-Inlet	72-56-06	CFM56-3
301-475-207-0	No. 1 Bearing Oil Baffle	72-22-14	CFM56-3
301-484-001-0	Rear Rotating Air/Oil Seal - Config. 2	72-55-04	CFM56-3
301-555-227-0	Shroud Support-LPT	72-54-04	CFM56-3
301-555-228-0	Shroud Support-LPT	72-54-04	CFM56-3
305-006-509-0	Vane Assy-Fan Booster, Stg. 2	72-21-09	CFM56-3
305-056-106-0	Rotor Support-LPT	72-54-05	CFM56-3
305-056-109-0	Rotor Support-LPT	72-54-05	CFM56-3
305-056-110-0	Rotor Support-LPT	72-54-05	CFM56-3
305-056-111-0	Rotor Support-LPT	72-54-05	CFM56-3
305-056-112-0	Rotor Support-LPT	72-54-05	CFM56-3
305-056-115-0	Rotor Support-LPT	72-54-05	CFM56-3
305-056-116-0	Rotor Support-LPT	72-54-05	CFM56-3
305-056-117-0	Rotor Support-LPT	72-54-05	CFM56-3
305-056-118-0	Rotor Support-LPT	72-54-05	CFM56-3
305-056-119-0	Rotor Support-LPT	72-54-05	CFM56-3
305-056-120-0	Rotor Support-LPT	72-54-05	CFM56-3
305-056-121-0	Rotor Support-LPT	72-54-05	CFM56-3
305-056-122-0	Rotor Support-LPT	72-54-05	CFM56-3
305-056-123-0	Rotor Support-LPT	72-54-05	CFM56-3
305-056-124-0	Rotor Support-LPT	72-54-05	CFM56-3
305-078-639-0	Case Assy-LPT Rear	72-54-07	CFM56-3
305-078-642-0	Case Assy-LPT Rear	72-54-07	CFM56-3
305-078-643-0	Case Assy-LPT Rear	72-54-07	CFM56-3
305-078-648-0	Case Assy-LPT Rear	72-54-07	CFM56-3
305-078-651-0	Case Assy-LPT Rear	72-54-07	CFM56-3
305-078-652-0	Case Assy-LPT Rear	72-54-07	CFM56-3
305-078-653-0	Case Assy-LPT Rear	72-54-07	CFM56-3
305-078-654-0	Case Assy-LPT Rear	72-54-07	CFM56-3
305-097-903-0	Bumper Bearing	72-55-13	CFM56-3
305-098-405-0	Fwd. Rotating Oil Seal	72-55-12	CFM56-3
305-098-406-0	Fwd. Rotating Oil Seal	72-55-12	CFM56-3
305-098-407-0	Fwd. Rotating Oil Seal	72-55-12	CFM56-3
305-396-303-0	Oil Separator Ring	72-22-05	CFM56-3
305-439-401-0	Stationary Air/Oil Seal - Config. 2	72-22-11	CFM56-3
305-439-402-0	Stationary Air/Oil Seal	72-22-11	CFM56-3
334-007-196-0	Center Vent Tube	72-55-06	CFM56-3
335-003-304-0	No. 1 Bearing Support Assembly	72-22-02	CFM56-3

JETAIR SUPPORT, INC.

CAPABILITY LIST

CFM56

335-003-305-0	No. 1 Bearing Support Assembly	72-22-02	CFM56-3
335-006-405-0	Fan Shaft	72-22-01	CFM56-3
335-006-407-0	Fan Shaft	72-22-01	CFM56-3
335-006-414-0	Fan Shaft	72-22-01	CFM56-3
335-006-511-0	Vane Assy-Fan Booster, Stg. 2	72-21-09	CFM56-3
335-006-512-0	Vane Assy-Fan Booster, Stg. 2	72-21-09	CFM56-3
335-006-513-0	Vane Assy-Fan Booster, Stg. 2	72-21-09	CFM56-3
335-006-514-0	Vane Assy-Fan Booster, Stg. 2	72-21-09	CFM56-3
335-006-607-0	Vane Assy-Fan Booster, Stg. 3	72-21-09	CFM56-3
335-006-609-0	Vane Assy-Fan Booster, Stg. 3	72-21-09	CFM56-3
335-006-610-0	Vane Assy-Fan Booster, Stg. 3	72-21-09	CFM56-3
335-006-611-0	Vane Assy-Fan Booster, Stg. 3	72-21-09	CFM56-3
335-006-612-0	Vane Assy-Fan Booster, Stg. 3	72-21-09	CFM56-3
335-006-613-0	Vane Assy-Fan Booster, Stg. 3	72-21-09	CFM56-3
335-006-614-0	Vane Assy-Fan Booster, Stg. 3	72-21-09	CFM56-3
335-006-615-0	Vane Assy-Fan Booster, Stg. 3	72-21-09	CFM56-3
335-006-616-0	Vane Assy-Fan Booster, Stg. 3	72-21-09	CFM56-3
335-006-617-0	Vane Assy-Fan Booster, Stg. 3	72-21-09	CFM56-3
335-006-619-0	Vane Assy-Fan Booster, Stg. 3	72-21-09	CFM56-3
335-006-620-0	Vane Assy-Fan Booster, Stg. 3	72-21-09	CFM56-3
335-006-621-0	Vane Assy-Fan Booster, Stg. 3	72-21-09	CFM56-3
335-006-708-0	Vane Assy-Fan Booster, Stg. 4	72-21-09	CFM56-3
335-006-709-0	Vane Assy-Fan Booster, Stg. 4	72-21-09	CFM56-3
335-006-710-0	Vane Assy-Fan Booster, Stg. 4	72-21-09	CFM56-3
335-006-711-0	Vane Assy-Fan Booster, Stg. 4	72-21-09	CFM56-3
335-006-714-0	Vane Assy-Fan Booster, Stg. 4	72-21-09	CFM56-3
335-006-716-0	Vane Assy-Fan Booster, Stg. 4	72-21-09	CFM56-3
335-006-717-0	Vane Assy-Fan Booster, Stg. 4	72-21-09	CFM56-3
335-006-718-0	Vane Assy-Fan Booster, Stg. 4	72-21-09	CFM56-3
335-006-719-0	Vane Assy-Fan Booster, Stg. 4	72-21-09	CFM56-3
335-006-720-0	Vane Assy-Fan Booster, Stg. 4	72-21-09	CFM56-3
335-006-721-0	Vane Assy-Fan Booster, Stg. 4	72-21-09	CFM56-3
335-006-722-0	Vane Assy-Fan Booster, Stg. 4	72-21-09	CFM56-3
335-009-113-0	Vane Assy-Fan Booster, Stg. 1	72-21-09	CFM56-3
335-009-117-0	Vane Assy-Fan Booster, Stg. 1	72-21-09	CFM56-3
335-009-118-0	Vane Assy-Fan Booster, Stg. 1	72-21-09	CFM56-3
335-009-122-0	Vane Assy-Fan Booster, Stg. 1	72-21-09	CFM56-3
335-009-123-0	Vane Assy-Fan Booster, Stg. 1	72-21-09	CFM56-3
335-009-124-0	Vane Assy-Fan Booster, Stg. 1	72-21-09	CFM56-3
335-009-125-0	Vane Assy-Fan Booster, Stg. 1	72-21-09	CFM56-3
335-009-126-0	Vane Assy-Fan Booster, Stg. 1	72-21-09	CFM56-3
335-009-127-0	Vane Assy-Fan Booster, Stg. 1	72-21-09	CFM56-3
335-009-129-0	Vane Assy-Fan Booster, Stg. 1	72-21-09	CFM56-3
335-009-130-0	Vane Assy-Fan Booster, Stg. 1	72-21-09	CFM56-3
335-009-131-0	Vane Assy-Fan Booster, Stg. 1	72-21-09	CFM56-3
335-009-132-0	Vane Assy-Fan Booster, Stg. 1	72-21-09	CFM56-3
335-009-133-0	Vane Assy-Fan Booster, Stg. 1	72-21-09	CFM56-3
335-009-134-0	Vane Assy-Fan Booster, Stg. 1	72-21-09	CFM56-3
335-009-135-0	Vane Assy-Fan Booster, Stg. 1	72-21-09	CFM56-3
335-009-136-0	Vane Assy-Fan Booster, Stg. 1	72-21-09	CFM56-3
335-009-137-0	Vane Assy-Fan Booster, Stg. 1	72-21-09	CFM56-3
335-010-102-0	No. 2 Bearing Support Assembly	72-22-03	CFM56-3

JETAIR SUPPORT, INC.

CAPABILITY LIST

CFM56

335-010-104-0	No. 2 Bearing Support Assembly	72-22-03	CFM56-3
335-030-701-0	Housing, Inner and Outer Radial Drive Shaft	72-23-05	CFM56-3
335-030-701-0	Housing, Inner and Outer Radial Drive Shaft	72-23-05	CFM56-3
335-192-202-0	Vane Assy-Fan Booster, Stg. 2	72-21-09	CFM56-7
335-192-203-0	Vane Assy-Fan Booster, Stg. 2	72-21-09	CFM56-7
335-293-011-0	No. 1 Bearing Housing	72-22-04	CFM56-3
335-305-000-0	Support, Bearing	72-62-04	CFM56-3
335-305-600-0	Support, Bearing	72-62-04	CFM56-3
335-305-601-0	Support, Bearing	72-62-04	CFM56-3
335-352-001-0	Fan/Booster Centering Shroud	72-21-17	CFM56-3
340-001-307-0	Vane Assy-Fan Booster, Stg. 1	72-21-09	CFM56-7
340-001-308-0	Vane Assy-Fan Booster, Stg. 1	72-21-09	CFM56-7
340-001-309-0	Vane Assy-Fan Booster, Stg. 1	72-21-09	CFM56-7
340-001-310-0	Vane Assy-Fan Booster, Stg. 1	72-21-09	CFM56-7
340-058-302-0	Vane Assy-Fan Booster, Stg. 3	72-21-09	CFM56-7
340-058-303-0	Vane Assy-Fan Booster, Stg. 3	72-21-09	CFM56-7
340-058-402-0	Vane Assy-Fan Booster, Stg. 4	72-21-09	CFM56-7
340-058-404-0	Vane Assy-Fan Booster, Stg. 4	72-21-09	CFM56-7
340-058-405-0	Vane Assy-Fan Booster, Stg. 4	72-21-09	CFM56-7
340-058-406-0	Vane Assy-Fan Booster, Stg. 4	72-21-09	CFM56-7
85M66G01	HPT Aft Outer Seal Support	72-51-04	CFM56-3
85M66G02	HPT Aft Outer Seal Support	72-51-04	CFM56-3
85M66G04	HPT Aft Outer Seal Support	72-51-04	CFM56-3
85M66G05	HPT Aft Outer Seal Support	72-51-04	CFM56-3
9336M78G01	No. 3 Brng. Fwd Stationary Oil Seal - Config. 1	72-23-19	CFM56-3
9339M40G01	No. 3 Brng. Fwd Stationary Oil Seal - Config. 2	72-23-19	CFM56-3
9339M40G03	No. 3 Brng. Fwd Stationary Oil Seal - Config. 2	72-23-19	CFM56-3
9339M40G04	No. 3 Brng. Fwd Stationary Oil Seal - Config. 2	72-23-19	CFM56-3
9513M16G04	HPT Shroud Air Impigement Manifold	72-53-05	CFM56-3
9514M69P01	HPT Rotor Disk	72-52-02	CFM56-3
9514M69P04	HPT Rotor Disk	72-52-02	CFM56-3
9514M69P05	HPT Rotor Disk	72-52-02	CFM56-3
9514M69P06	HPT Rotor Disk	72-52-02	CFM56-3
9514M69P09	HPT Rotor Disk	72-52-02	CFM56-3
9514M72P03	HPT Rotor Front Shaft	72-52-04	CFM56-3
9969M93G06	Compressor Rear Stator Support	72-41-07	CFM56-3
9992M65G06	HPC Inner Shroud, 1st Stage	72-32-07	CFM56-3
9992M65G08	HPC Inner Shroud, 1st Stage	72-32-07	CFM56-3
9992M65G10	HPC Inner Shroud, 1st Stage	72-32-07	CFM56-3
9994M18G03	HPC Inner Shroud, 2nd Stage	72-32-07	CFM56-3
9994M18G05	HPC Inner Shroud, 2nd Stage	72-32-07	CFM56-3
9994M18G07	HPC Inner Shroud, 2nd Stage	72-32-07	CFM56-3
9994M19G03	HPC Inner Shroud, 3rd Stage	72-32-07	CFM56-3

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT3D

<http://www.jetairsupport.com>

Part Number	Description	Engine	Chapter
414215	Disk-Compressor, 15th Stage	JT3D	
416501	Disk-Turbine, 1st Stage	JT3D	
417173	Tube and Heatshield Assy	JT3D	
496801	Disk-Turbine, 1st Stage	JT3D	
506966	Shaft-Front Compressor Drive, LPT	JT3D	
529773	Shroud Assy, 3rd Stage	JT3D	
544720	Support Assy, No. 5 Bearing	JT3D	
575871	Support Assy, No. 5 Bearing	JT3D	
575872	Support Assy, No. 5 Bearing	JT3D	
575874	Support Assy, No. 5 Bearing	JT3D	
575875	Support Assy, No. 5 Bearing	JT3D	
576588	Tube and Heatshield Assy	JT3D	
576602	Disk-Compressor, 2nd Stage	JT3D	
617442	Shaft-Front Compressor Drive, LPT	JT3D	
617443	Shaft-Front Compressor Drive, LPT	JT3D	
617445	Shaft-Front Compressor Drive, LPT	JT3D	
622242	Shaft-Front Compressor Drive, LPT	JT3D	
622244	Shaft-Front Compressor Drive, LPT	JT3D	
622245	Shaft-Front Compressor Drive, LPT	JT3D	
622246	Shaft-Front Compressor Drive, LPT	JT3D	
622247	Shaft-Front Compressor Drive, LPT	JT3D	
622251	Shaft-Front Compressor Drive, LPT	JT3D	
622379	Heat Shield, Comb. Chamber Clamp	JT3D	
622382	Clamp, Combustion Chamber	JT3D	
622402	Support, Turbine Stator	JT3D	
622734	Shaft-Front Compressor Drive, LPT	JT3D	
625948	Support, Turbine Stator	JT3D	
628355	Combustion Chamber	JT3D	
628356	Combustion Chamber	JT3D	
628357	Combustion Chamber	JT3D	
628358	Combustion Chamber	JT3D	
628359	Combustion Chamber	JT3D	
644701	Duct and Fairing Assy, Turbine Exhaust	JT3D	
657814	Disk-Compressor, 14th Stage	JT3D	
657815	Disk-Compressor, 15th Stage	JT3D	
671002	Shaft-Front Compressor Drive, LPT	JT3D	
671003	Shaft-Front Compressor Drive, LPT	JT3D	
671004	Shaft-Front Compressor Drive, LPT	JT3D	
671005	Shaft-Front Compressor Drive, LPT	JT3D	
671006	Shaft-Front Compressor Drive, LPT	JT3D	
671009	Shaft-Front Compressor Drive, LPT	JT3D	
671010	Shaft-Front Compressor Drive, LPT	JT3D	
671011	Shaft-Front Compressor Drive, LPT	JT3D	
671012	Shaft-Front Compressor Drive, LPT	JT3D	
671013	Shaft-Front Compressor Drive, LPT	JT3D	

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT3D

671014	Shaft-Front Compressor Drive, LPT	JT3D
671015	Shaft-Front Compressor Drive, LPT	JT3D
671016	Shaft-Front Compressor Drive, LPT	JT3D
671017	Shaft-Front Compressor Drive, LPT	JT3D
671018	Shaft-Front Compressor Drive, LPT	JT3D
671019	Shaft-Front Compressor Drive, LPT	JT3D
671020	Shaft-Front Compressor Drive, LPT	JT3D
671023	Shaft-Front Compressor Drive, LPT	JT3D
674828	Shaft-Front Compressor Drive, LPT	JT3D
674829	Shaft-Front Compressor Drive, LPT	JT3D
674830	Shaft-Front Compressor Drive, LPT	JT3D
694794	Outlet Duct, Combustion Chamber	JT3D
699614	Disk-Compressor, 14th Stage	JT3D
701514	Disk-Compressor, 14th Stage	JT3D
703214	Disk-Compressor, 14th Stage	JT3D
704332	Combustion Chamber	JT3D
704333	Combustion Chamber	JT3D
704334	Combustion Chamber	JT3D
704335	Combustion Chamber	JT3D
730801	Hub, Front - Front Compressor	JT3D
732083	Shroud Assy, 3rd Stage	JT3D
734873	Shroud Assy, 3rd Stage	JT3D
735114	Disk-Compressor, 14th Stage	JT3D
739201	Hub, Front - Front Compressor	JT3D
746441	Hub, Front - Front Compressor	JT3D
750414	Disk-Compressor, 14th Stage	JT3D
750415	Disk-Compressor, 15th Stage	JT3D
755107	Shaft-Front Compressor Drive, LPT	JT3D
759510	Support, Turbine Stator	JT3D
759511	Support, Turbine Stator	JT3D
765049	Outlet Duct, Combustion Chamber	JT3D
765058	Clamp, Combustion Chamber	JT3D
767394	Combustion Chamber	JT3D
767395	Combustion Chamber	JT3D
767396	Combustion Chamber	JT3D
767397	Combustion Chamber	JT3D
767398	Combustion Chamber	JT3D
767411	Heat Shield, Comb. Chamber Clamp	JT3D
767922	Support, Turbine Stator	JT3D
767923	Support, Turbine Stator	JT3D
771252	Outlet Duct, Combustion Chamber	JT3D
771253	Outlet Duct, Combustion Chamber	JT3D
771254	Outlet Duct, Combustion Chamber	JT3D
781390	Combustion Chamber	JT3D
781391	Combustion Chamber	JT3D
781393	Combustion Chamber	JT3D

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT3D

781394	Combustion Chamber	JT3D
781395	Combustion Chamber	JT3D
781397	Combustion Chamber	JT3D
784364	Duct and Fairing Assy, Turbine Exhaust	JT3D
784366	Duct and Fairing Assy, Turbine Exhaust	JT3D
795314	Disk-Compressor, 14th Stage	JT3D
795315	Disk-Compressor, 15th Stage	JT3D
811901	Disk-Turbine, 1st Stage	JT3D
812001	Disk-Turbine, 1st Stage	JT3D
813801	Disk-Turbine, 1st Stage	JT3D
814201	Disk-Turbine, 1st Stage	JT3D

JETAIR SUPPORT, INC.

CAPABILITY LIST JT8D and JT8D-200

<http://www.jetairsupport.com>

Part Number	Description	Engine	Chapter
436315	Stator, 5th Stage	JT8D	72-33-56
446314	Stator, 4th Stage	JT8D	72-33-55
466092	Duct, Outer - Front Compressor	JT8D	72-34-07
468559	Heat Shield, No. 5 Bearing	JT8D	72-52-13
468560	Heat Shield, No. 5 Bearing	JT8D	72-52-13
473667	Heat Shield, No. 4 Bearing	JT8D	72-37-10
478094	Duct, Fan - Rear Compressor	JT8D	72-34-05
478761	Tank Assy, Lubrication Oil	JT8D	72-61-65
479197	Housing Assy, No. 1 Bearing	JT8D	72-23-02
479927	Spacer-Compressor, 3 to 4th Stage	JT8D	72-33-43
479929	Spacer-Compressor, 4 to 5th Stage	JT8D	72-33-43
480205	Disk-Compressor, 5th Stage	JT8D	72-33-36
480231	Spacer-Compressor, 7 to 8th Stage	JT8D	72-36-11
480232	Spacer-Compressor, 8 to 9th Stage	JT8D	72-36-12
481004	Hub, Rear - Front Compressor, 4th Stage	JT8D	72-33-35
481859	Spacer-Compressor, 10 to 11th Stage	JT8D	72-36-14
481860	Spacer-Compressor, 11 to 12th Stage	JT8D	72-36-15
482177	Tube-Seal, Rear Compressor	JT8D	72-36-19
482179	Spacer-Compressor, 9 to 10th Stage	JT8D	72-36-13
482469	Spacer-Compressor, 2 to 3rd Stage	JT8D	72-33-42
482471	Fan Case, Rear	JT8D	72-33-67
483281	Spacer-Compressor, 5 to 6th Stage	JT8D	72-33-45
483506	Disk-Compressor, 6th Stage	JT8D	72-33-37
483603	Spacer-Compressor, 12 to 13th Stage	JT8D	72-36-16
483614	Air Seal Ring, No. 2 Bearing	JT8D	72-34-13
483615	Air Seal Ring, No. 2 Bearing	JT8D	72-34-13
483799	Housing Assy, No. 5 Bearing	JT8D	72-41-24
484088	Air Seal Ring, Turb. - 4th Stage Outer	JT8D	72-53-61
484852	Seal, 7th Stage	JT8D	72-36-22
484907	Disk-Compressor, 7th Stage	JT8D	72-36-41
489040	Spacer-Compressor, 1 to 2nd Stage	JT8D	72-33-41
489042	Lock-Blade, 1st Stage	JT8D	72-33-15
489045	Fan Case, Front	JT8D	72-33-66
489106	Duct Segment, Fan & Turb. Exhaust	JT8D	72-54-11
489442	Support, Rear-No. 1 Bearing	JT8D	72-23-03
491338	Seal Assy, No. 3 Bearing	JT8D	72-34-40
491653	Duct & Fairing Assy	JT8D	72-54-02
492725	Hub, Rear - Rear Compressor	JT8D	72-36-18
492726	Air Seal Ring, No. 4 Bearing	JT8D	72-36-80
493177	Duct, Fan Exhaust Inner Duct Segments	JT8D	72-54-81
493179	Duct Segment, Fan Turbine Inner	JT8D	72-71-05
494374	Stator, 4th Stage	JT8D	72-33-55
494903	Disk-Compressor, 3rd Stage	JT8D	72-33-34
494904	Hub, Rear - Front Compressor, 4th Stage	JT8D	72-33-35
494905	Disk-Compressor, 5th Stage	JT8D	72-33-36

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

494906	Disk-Compressor, 6th Stage	JT8D	72-33-37
495440	Oil Nozzle, No. 2 & No. 3 Bearing	JT8D	72-34-09
496508	Fan Exit Case	JT8D	72-33-83
496830	Hub, Rear - Rear Compressor	JT8D	72-36-18
496908	Disk-Compressor, 8th Stage	JT8D	72-36-42
496909	Disk-Compressor, 9th Stage	JT8D	72-36-43
496910	Disk-Compressor, 10th Stage	JT8D	72-36-44
496911	Disk-Compressor, 11th Stage	JT8D	72-36-45
496912	Disk-Compressor, 12th Stage	JT8D	72-36-46
496913	Disk-Compressor, 13th Stage	JT8D	72-36-47
500281	Air Seal, 2nd Stage Turb. Shroud	JT8D	72-53-56
500507	Disk-Compressor, 7th Stage	JT8D	72-36-41
500734	Support-Front Accessory Drive	JT8D	72-21-01
500870	Fan Exit Case	JT8D	72-33-83
502075	Stator, 5th Stage	JT8D	72-33-56
502502	Disk-Compressor, 2nd Stage	JT8D	72-33-33
502694	Duct, Outer - Front Compressor	JT8D	72-34-07
502792	Duct, Fan Exhaust Outer	JT8D	72-54-30
502793	Duct, Fan Exhaust Outer	JT8D	72-54-30
504101	Hub, Front - Front Compressor	JT8D	72-33-31
504385	Ring, Air Seal, Turbine - 3rd Stage	JT8D	72-53-57
504386	Ring, Air Seal, Turbine - 4th Stage	JT8D	72-53-58
506380	Tank Assy, Lubrication Oil	JT8D	72-61-65
511738	Air Seal-Turbine, 3rd Stage	JT8D	72-53-27
512595	Spacer-Compressor, 2 to 3rd Stage	JT8D	72-33-42
513835	Spacer-Compressor, 1 to 2nd Stage	JT8D	72-33-41
513838	Lock-Blade, 1st Stage	JT8D	72-33-15
515201	Hub, Front - Front Compressor	JT8D	72-33-31
518945	Housing Assy, No. 1 Bearing	JT8D	72-23-02
519584	Stator, 4th Stage	JT8D	72-33-55
519585	Stator, 5th Stage	JT8D	72-33-56
520211	Exhaust Case, Turbine	JT8D	72-54-01
520451	Retaining Plate, Blade - 1st Stage	JT8D	72-33-15
520504	Hub-Turbine, 4th Stage	JT8D	72-53-18(19)
520602	Disk-Compressor, 2nd Stage	JT8D	72-33-33
521011	Spacer-Compressor, 12 to 13th Stage	JT8D	72-36-16
521040	Tube-Seal, Rear Compressor	JT8D	72-36-19
521041	Hub, Front - Rear Compressor	JT8D	72-36-17
521088	Case, Combustion Chamber Inner	JT8D	72-41-10
521316	Oil Seal Ring, No. 4 Bearing	JT8D	72-37-08
521372	No. 4 1/2 & 6 Shield and Tube Assy	JT8D	72-53-30
522190	Spacer-Compressor, 1 to 2nd Stage	JT8D	72-33-41
522194	Spacer-Compressor, 3 to 4th Stage	JT8D	72-33-43
522196	Spacer-Compressor, 4 to 5th Stage	JT8D	72-33-44
522198	Spacer-Compressor, 5 to 6th Stage	JT8D	72-33-45
522787	Ring, Air Seal, Turbine - 2nd Stage	JT8D	72-53-56

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

522788	Air Seal Ring, Turb. - 3rd Stage Outer	JT8D	72-53-60
523702	Duct Segment, Fan & Turb. Exhaust	JT8D	72-54-11
523704	Duct Segment, Fan & Turb. Exhaust	JT8D	72-54-11
523798	Duct & Fairing Assy	JT8D	72-54-02
524154	Hub, Rear - Rear Compressor	JT8D	72-36-18
524857	Hub, Rear - Rear Compressor	JT8D	72-36-18
525084	Spacer-Compressor, 2 to 3rd Stage	JT8D	72-33-42
525204	Duct, Fan Exhaust Inner Duct Segments	JT8D	72-54-81
525819	Support, No. 5 Bearing Seal	JT8D	72-52-11
525838	Lock-Blade, 1st Stage	JT8D	72-33-15
528161	Housing Assy, No. 6 Bearing	JT8D	72-54-17
528516	Hub, Rear - Rear Compressor	JT8D	72-36-18
529077	Duct, Fan Exhaust Outer	JT8D	72-54-30
529152	Spacer-Compressor, 4 to 5th Stage	JT8D	72-33-43
529153	Spacer-Compressor, 3 to 4th Stage	JT8D	72-33-43
529154	Spacer-Compressor, 5 to 6th Stage	JT8D	72-33-45
529155	Spacer-Compressor, 1 to 2nd Stage	JT8D	72-33-41
529473	Stator, 3rd Stage	JT8D	72-33-54
529855	Heat Shield, No. 5 Bearing	JT8D	72-52-13
530007	Case, Diffuser	JT8D	72-37-01
531893	Duct, Fan - Rear Compressor	JT8D	72-34-08
537849	Duct, Fan Exhaust Outer	JT8D	72-54-30
538638	Housing Assy, Gearbox Front	JT8D	72-61-02
538639	Housing Assy, Gearbox Front	JT8D	72-61-02
538953	Spacer, Turbine Rotor	JT8D	72-53-21
538955	Air Seal-Turbine, 3rd Stage	JT8D	72-53-27
538956	Air Seal-Turbine, 4th Stage	JT8D	72-53-28
539002	Disk-Turbine, 2nd Stage	JT8D	72-53-16
539003	Disk-Turbine, 3rd Stage	JT8D	72-53-17
539004	Hub-Turbine, 4th Stage	JT8D	72-53-18(19)
539461	Ring Assy, Air Seal, 13th Stage	JT8D	72-37-05
540503	Disk-Turbine, 3rd Stage	JT8D	72-53-17
540683	Stator, 3rd Stage	JT8D	72-33-54
540995	Duct, Fan - Rear Compressor	JT8D	72-34-08
540997	Duct, Outer - Front Compressor	JT8D	72-34-07
541057	Duct-Fan, Diffuser, Outer	JT8D	72-38-01
541063	Case, Turbine Rear	JT8D	72-53-51
542060	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
542155	Case, Combustion Chamber Outer	JT8D	72-41-11
542261	Air Seal-Turbine, 3rd Stage	JT8D	72-53-27
542470	Case, Diffuser	JT8D	72-37-01
542471	Case, Diffuser	JT8D	72-37-01
542472	Case, Diffuser	JT8D	72-37-01
542473	Case, Diffuser	JT8D	72-37-01
542487	Case, Diffuser	JT8D	72-37-01
542489	Case, Diffuser	JT8D	72-37-01

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

542573	Stator, 3rd Stage	JT8D	72-33-54
544779	Spacer-Compressor, 1 to 2nd Stage	JT8D	72-33-41
544781	Spacer-Compressor, 1 to 2nd Stage	JT8D	72-33-41
547060	Housing Assy, No. 6 Bearing	JT8D	72-54-17
547337	Duct, Outer - Front Compressor	JT8D	72-34-07
547448	Air Seal-Turbine, 3rd Stage	JT8D	72-53-27
553566	Duct Segment, Fan Turbine Inner	JT8D	72-71-05
553577	Duct, Fan Exhaust Inner Duct Segments	JT8D	72-54-81
553598	Duct Segment, Fan & Turb. Exhaust	JT8D	72-54-11
553599	Duct Segment, Fan & Turb. Exhaust	JT8D	72-54-11
553626	Duct Assy, Fan Diffuser, Left	JT8D	72-71-02
555117	Housing Assy, Gearbox Front	JT8D	72-61-02
555119	Housing Assy, Gearbox Front	JT8D	72-61-02
555637	Housing Assy, Gearbox Rear	JT8D	72-61-01
555638	Housing Assy, Gearbox Rear	JT8D	72-61-01
556582	Stator, 2nd Stage	JT8D	72-33-53
556973	Heatshield, Inner-No. 4 & 5 Bearing	JT8D	72-41-01
557340	Spacer-Compressor, 9 to 10th Stage	JT8D	72-36-13
557341	Spacer-Compressor, 10 to 11th Stage	JT8D	72-36-14
557342	Spacer-Compressor, 11 to 12th Stage	JT8D	72-36-15
557343	Spacer-Compressor, 12 to 13th Stage	JT8D	72-36-16
557357	Oil Nozzle, No. 2 & No. 3 Bearing	JT8D	72-34-09
557970	Rear Support, Combustion Chamber	JT8D	72-51-21
558671	Duct & Fairing Assy	JT8D	72-54-02
559523	Housing Assy, Gearbox Rear	JT8D	72-61-01
564845	Fan Case, Front	JT8D	72-33-66
564846	Fan Case, Rear	JT8D	72-33-67
565016	Tank Assy, Lubrication Oil	JT8D	72-61-65
565482	Stator, 2nd Stage	JT8D	72-33-53
565483	Stator, 3rd Stage	JT8D	72-33-54
565698	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
565744	Hub, Rear - Rear Compressor	JT8D	72-36-18
565759	Duct, Fan Exhaust Outer	JT8D	72-54-30
567172	Shroud Assy, 2nd Stage	JT8D	72-53-56
567173	Shroud Assy, 3rd Stage	JT8D	72-53-57
567174	Shroud Assy, 4th Stage	JT8D	72-53-58
567649	Case, Turbine Front	JT8D	72-51-02
567656	Support, Turbine Stator	JT8D	72-51-01
567852	Shroud, Turbine - 2nd Stage	JT8D	72-53-56
567853	Shroud, Turbine - 3rd Stage	JT8D	72-53-57
567854	Shroud, Turbine - 4th Stage	JT8D	72-53-58
568212	Case, Diffuser	JT8D	72-37-01
568214	Case, Diffuser	JT8D	72-37-14
568268	Outer Outlet Duct	JT8D	72-51-23
568317	Case, Diffuser	JT8D	72-37-01
568323	Air Seal-Turbine, 4th Stage	JT8D	72-53-28

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

568324	Air Seal-Turbine, 3rd Stage	JT8D	72-53-27
568327	Ring, Air Seal, Turbine - 4th Stage	JT8D	72-53-58
568328	Ring, Air Seal, Turbine - 3rd Stage	JT8D	72-53-57
569574	Stator, 4th Stage	JT8D	72-33-55
569575	Stator, 5th Stage	JT8D	72-33-56
570280	Spacer-Compressor, 2 to 3rd Stage	JT8D	72-33-42
570302	Disk-Compressor, 2nd Stage	JT8D	72-33-33
570402	Disk-Compressor, 2nd Stage	JT8D	72-33-33
570403	Spacer-Compressor, 2 to 3rd Stage	JT8D	72-33-42
570554	Case, Diffuser	JT8D	72-37-01
570583	Case, Diffuser	JT8D	72-37-01
571579	Spacer-Compressor, 2 to 3rd Stage	JT8D	72-33-42
571581	Spacer-Compressor, 2 to 3rd Stage	JT8D	72-33-42
572286	Shaft, Turb - Rear Comp Drive (T1)	JT8D	72-52-03
572670	Case, Combustion Chamber Inner	JT8D	72-41-10
572674	Rear Support, Combustion Chamber	JT8D	72-51-21
572682	Support, Turbine Stator	JT8D	72-51-01
572688	Case, Combustion Chamber Inner	JT8D	72-41-10
572689	Case, Combustion Chamber Inner	JT8D	72-41-10
572690	Case, Combustion Chamber Inner	JT8D	72-41-10
575673	Stator, 3rd Stage	JT8D	72-33-54
575674	Stator, 4th Stage	JT8D	72-33-55
575675	Stator, 5th Stage	JT8D	72-33-56
576777	Duct & Fairing Assy	JT8D	72-54-02
577066	Air Seal, Compressor - 2nd Stage	JT8D	72-33-16
577084	Spacer-Compressor, 5 to 6th Stage	JT8D	72-33-45
577618	Retaining Plate, Blade - 1st Stage	JT8D	72-33-15
578001	Disk-Turbine, 1st Stage	JT8D	72-52-02
578059	Housing Assy, Gearbox Front	JT8D	72-61-02
578272	Shroud Assy, 2nd Stage	JT8D	72-53-56
578352	Shroud, Turbine - 2nd Stage	JT8D	72-53-56
578372	Shroud Assy, 2nd Stage	JT8D	72-53-56
578373	Shroud Assy, 3rd Stage	JT8D	72-53-57
578374	Shroud Assy, 4th Stage	JT8D	72-53-58
578452	Shroud, Turbine - 2nd Stage	JT8D	72-53-56
578453	Shroud, Turbine - 3rd Stage	JT8D	72-53-57
578454	Shroud, Turbine - 4th Stage	JT8D	72-53-58
578481	Stator, 1st Stage	JT8D	72-33-51
579093	Fan Case, Rear	JT8D	72-33-67
579095	Fan Case, Front	JT8D	72-33-66
579114	Air Seal-Turbine, 3rd Stage	JT8D	72-53-27
579115	Air Seal-Turbine, 4th Stage	JT8D	72-53-28
579281	Stator, 1st Stage	JT8D	72-33-51
579672	Stator, 2nd Stage	JT8D	72-33-53
579861	Support, Turbine Stator	JT8D	72-51-01
581022	Disk-Turbine, 2nd Stage	JT8D	72-53-16

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

583385	Spacer-Compressor, 3 to 4th Stage	JT8D	72-33-43
583423	Disk-Compressor, 3rd Stage	JT8D	72-33-34
584322	Duct-Fan, Diffuser, Outer	JT8D	72-38-01
584861	No. 4 1/2 & 6 Shield and Tube Assy	JT8D	72-53-30
586906	Disk-Compressor, 6th Stage	JT8D	72-33-37
586911	Housing Assy, No. 4 Bearing	JT8D	72-37-07
587052	Shroud, Turbine - 2nd Stage	JT8D	72-53-56
587072	Shroud Assy, 2nd Stage	JT8D	72-53-56
587205	Disk-Compressor, 5th Stage	JT8D	72-33-36
587350	Outer Outlet Duct	JT8D	72-51-23
587501	Disk-Turbine, 1st Stage	JT8D	72-52-02
587572	Heat Shield, No. 4 Bearing	JT8D	72-37-10
587573	Heat Shield, No. 4 Bearing	JT8D	72-37-10
587837	Case, Diffuser	JT8D	72-37-01
589149	Housing Assy, No. 4 Bearing	JT8D	72-37-07
589470	Fan Exit Case	JT8D	72-33-83
590373	Stator, 3rd Stage	JT8D	72-33-54
590383	Stator, 3rd Stage	JT8D	72-33-54
590384	Stator, 4th Stage	JT8D	72-33-55
591573	Housing Assy, Gearbox Rear	JT8D	72-61-01
591804	Hub, Rear - Front Compressor	JT8D	72-33-35
591853	Fan Case, Front	JT8D	72-33-66
591857	Fan Case, Rear	JT8D	72-33-67
591915	Rear Support, Combustion Chamber	JT8D	72-51-21
593074	Housing Assy, Gearbox Rear	JT8D	72-61-01
593138	Support, Rear-No. 1 Bearing	JT8D	72-23-03
593159	Housing Assy, Gearbox Rear	JT8D	72-61-01
593161	Housing Assy, Gearbox Rear	JT8D	72-61-01
593162	Housing Assy, Gearbox Rear	JT8D	72-61-01
593212	Spacer-Compressor, 1 to 2nd Stage	JT8D	72-33-41
593217	Duct & Fairing Assy	JT8D	72-54-02
593258	Case, Diffuser	JT8D	72-37-01
593563	Housing Assy, Gearbox Front	JT8D	72-61-02
593565	Housing Assy, Gearbox Front	JT8D	72-61-02
594295	Case, Turbine Rear	JT8D	72-53-51
594296	Ring, Air Seal, Turbine - 2nd Stage	JT8D	72-53-56
594301	Hub, Front - Front Compressor	JT8D	72-33-31
596021	Housing Assy, No. 6 Bearing	JT8D	72-54-17
596517	Case, Turbine Front	JT8D	72-51-02
596705	Disk-Compressor, 5th Stage	JT8D	72-33-36
596773	Shroud Assy, 3rd Stage	JT8D	72-53-57
596774	Shroud Assy, 4th Stage	JT8D	72-53-58
596810	Spacer-Compressor, 9 to 10th Stage	JT8D	72-36-13
596812	Spacer-Compressor, 10 to 11th Stage	JT8D	72-36-14
596814	Spacer-Compressor, 11 to 12th Stage	JT8D	72-36-15
596881	Spacer-Compressor, 11 to 12th Stage	JT8D	72-36-15

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

597615	Housing Assy, No. 6 Bearing	JT8D	72-54-17
597616	Housing Assy, No. 6 Bearing	JT8D	72-54-17
597755	Duct, Outer - Front Compressor	JT8D	72-34-07
597756	Duct, Outer - Front Compressor	JT8D	72-34-07
599410	Disk-Compressor, 10th Stage	JT8D	72-36-44
599930	Case, Diffuser	JT8D	72-37-01
611106	Disk-Compressor, 6th Stage	JT8D	72-33-37
611626	Duct, Fan Exhaust Outer	JT8D	72-54-30
613782	Fan Case, Rear	JT8D	72-33-67
613783	Fan Case, Rear	JT8D	72-33-67
614334	Outlet Duct Assy	JT8D	72-51-15
614344	Duct Assy, Combustion Chamber	JT8D	72-51-15
615141	Housing Assy, Gearbox Rear	JT8D	72-61-01
615142	Housing Assy, Gearbox Rear	JT8D	72-61-01
615396	Housing Assy, Gearbox Rear	JT8D	72-61-01
615398	Housing Assy, Gearbox Rear	JT8D	72-61-01
615636	Housing Assy, Gearbox Rear	JT8D	72-61-01
615640	Housing Assy, Gearbox Rear	JT8D	72-61-01
615641	Housing Assy, Gearbox Rear	JT8D	72-61-01
615647	Housing Assy, Gearbox Rear	JT8D	72-61-01
615689	Duct Segment, Fan Turbine Inner	JT8D	72-71-05
615693	Duct, Fan Exhaust Inner Duct Segments	JT8D	72-54-81
615695	Duct, Fan Exhaust Inner Duct Segments	JT8D	72-54-81
616002	Housing Assy, Gearbox Rear	JT8D	72-61-01
616010	Housing Assy, Gearbox Rear	JT8D	72-61-01
616011	Housing Assy, Gearbox Rear	JT8D	72-61-01
616037	Housing Assy, Gearbox Front	JT8D	72-61-02
616110	Case, Diffuser	JT8D	72-37-01
616288	Duct-Fan, Diffuser, Outer	JT8D	72-38-01
616315	Case, Combustion Chamber Outer	JT8D	72-41-11
616612	Housing Assy, No. 5 Bearing	JT8D	72-41-24
616645	Retaining Plate, Blade - 1st Stage	JT8D	72-33-15
618037	Spacer-Compressor, 7 to 8th Stage	JT8D	72-36-11
618039	Spacer-Compressor, 8 to 9th Stage	JT8D	72-36-12
618703	Disk-Turbine, 3rd Stage	JT8D	72-53-17
618774	Air Seal Ring, No. 4 Bearing	JT8D	72-36-80
623303	Disk-Turbine, 3rd Stage	JT8D	72-53-17
623506	Duct, Fan Exhaust Inner Duct Segments	JT8D	72-54-81
624325	Support, Rear-No. 1 Bearing	JT8D	72-23-03
624326	Housing Assy, No. 1 Bearing	JT8D	72-23-02
624327	Support, Rear-No. 1 Bearing	JT8D	72-23-03
625071	Hub, Rear - Rear Compressor	JT8D	72-36-18
625658	Hub, Rear - Rear Compressor	JT8D	72-36-18
625660	Hub, Rear - Rear Compressor	JT8D	72-36-18
625665	Hub, Rear - Rear Compressor	JT8D	72-36-18
625668	Air Seal Ring, No. 4 Bearing	JT8D	72-36-80

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

625937	Duct Assy, Fan Diffuser, Left	JT8D	72-71-02
626042	Disk-Turbine, 2nd Stage	JT8D	72-53-16
626371	Exhaust Case, Turbine	JT8D	72-54-01
626389	Spacer-Compressor, 7 to 8th Stage	JT8D	72-36-11
626390	Spacer-Compressor, 8 to 9th Stage	JT8D	72-36-12
626391	Spacer-Compressor, 9 to 10th Stage	JT8D	72-36-13
626392	Spacer-Compressor, 10 to 11th Stage	JT8D	72-36-14
626393	Spacer-Compressor, 11 to 12th Stage	JT8D	72-36-15
626394	Spacer-Compressor, 12 to 13th Stage	JT8D	72-36-16
626603	Disk-Turbine, 3rd Stage	JT8D	72-53-17
626975	Ring, Air Seal, Turbine - 2nd Stage	JT8D	72-53-56
626976	Air Seal Ring, Turb. - 3rd Stage Outer	JT8D	72-53-60
626977	Air Seal Ring, Turb. - 4th Stage Outer	JT8D	72-53-61
627852	Case, Combustion Chamber Inner	JT8D	72-41-10
628116	Housing Assy, No. 3 Bearing	JT8D	72-34-32
628209	Disk-Compressor, 9th Stage	JT8D	72-36-43
628748	Inner Outlet Duct	JT8D	72-51-22
628765	Rear Support, Combustion Chamber	JT8D	72-51-21
628772	Outer Outlet Duct	JT8D	72-51-23
628778	Spacer-Compressor, 4 to 5th Stage	JT8D	72-33-44
628790	Support, Turbine Stator	JT8D	72-51-01
629057	Seal Assy, No. 3 Bearing	JT8D	72-34-40
629158	Duct Assy, Fan Diffuser, Left	JT8D	72-71-02
629160	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
629404	Hub-Turbine, 4th Stage	JT8D	72-53-18(19)
629547	Ring Assy, Air Seal, 13th Stage	JT8D	72-37-05
633386	Spacer-Turbine, 3 to 4th Stage	JT8D	72-53-22
633413	Disk-Compressor, 13th Stage	JT8D	72-36-47
633730	Support-Front Accessory Drive	JT8D	72-21-01
633732	Housing Assy, No. 1 Bearing	JT8D	72-23-02
633758	Support-Front Accessory Drive	JT8D	72-21-01
633760	Housing Assy, No. 1 Bearing	JT8D	72-23-02
633894	Duct, Outer - Front Compressor	JT8D	72-34-07
634332	Housing Assy, No. 6 Bearing	JT8D	72-54-17
634603	Case, Diffuser	JT8D	72-37-01
634605	Case, Diffuser	JT8D	72-37-01
634607	Duct-Fan, Diffuser, Outer	JT8D	72-38-01
634748	Ring Assy, Air Seal, 13th Stage	JT8D	72-37-05
636445	Housing Assy, No. 6 Bearing	JT8D	72-54-17
636990	Outer Outlet Duct	JT8D	72-51-23
636993	Rear Support, Combustion Chamber	JT8D	72-51-21
637816	Spacer-Compressor, 11 to 12th Stage	JT8D	72-36-15
638229	Housing Assy, No. 6 Bearing	JT8D	72-54-17
639020	Support, Turbine Stator	JT8D	72-51-01
639021	Support, Turbine Stator	JT8D	72-51-01
639024	Support, Turbine Stator	JT8D	72-51-01

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

639409	Duct & Fairing Assy	JT8D	72-54-02
639410	Duct & Fairing Assy	JT8D	72-54-02
639602	Duct & Fairing Assy	JT8D	72-54-02
639604	Exhaust Case, Turbine	JT8D	72-54-01
639611	Retaining Plate, Blade - 1st Stage	JT8D	72-33-15
639616	Retaining Plate, Blade - 1st Stage	JT8D	72-33-15
639617	Spacer-Compressor, 1 to 2nd Stage	JT8D	72-33-41
640329	Spacer-Compressor, 5 to 6th Stage	JT8D	72-33-45
640501	Hub, Front - Front Compressor	JT8D	72-33-31
640601	Hub, Front - Front Compressor	JT8D	72-33-31
640670	Spacer-Compressor, 12 to 13th Stage	JT8D	72-36-16
640677	Spacer-Compressor, 12 to 13th Stage	JT8D	72-36-16
641013	Disk-Compressor, 13th Stage	JT8D	72-36-47
641082	Stator, 2nd Stage	JT8D	72-33-53
641083	Stator, 3rd Stage	JT8D	72-33-54
642013	Disk-Compressor, 13th Stage	JT8D	72-36-47
642398	Housing Assy, Gearbox Rear	JT8D	72-61-01
642399	Housing Assy, Gearbox Rear	JT8D	72-61-01
642774	Housing Assy, Gearbox Rear	JT8D	72-61-01
642776	Housing Assy, Gearbox Front	JT8D	72-61-02
642822	Housing Assy, Gearbox Rear	JT8D	72-61-01
642823	Housing Assy, Gearbox Front	JT8D	72-61-02
642824	Housing Assy, Gearbox Front	JT8D	72-61-02
642969	Hub, Front - Rear Compressor	JT8D	72-36-17
647564	Fan Case, Rear	JT8D	72-33-67
647821	Fan Case, Rear	JT8D	72-33-67
648028	Spacer, Turbine Rotor	JT8D	72-53-21
648039	Housing Assy, No. 1 Bearing	JT8D	72-23-02
648962	Housing Assy, Gearbox Front	JT8D	72-61-02
649983	Shroud Assy, 3rd Stage	JT8D	72-53-57
649984	Shroud Assy, 4th Stage	JT8D	72-53-58
650327	Air Seal-Turbine, 4th Stage	JT8D	72-53-28
650403	Disk-Turbine, 3rd Stage	JT8D	72-53-17
650566	Case, Diffuser	JT8D	72-37-01
650568	Case, Diffuser	JT8D	72-37-01
650782	Hub, Front - Rear Compressor	JT8D	72-36-17
652493	Case, Diffuser	JT8D	72-37-01
652494	Case, Diffuser	JT8D	72-37-01
652529	Housing Assy, No. 4 Bearing	JT8D	72-37-07
652530	Housing Assy, No. 4 Bearing	JT8D	72-37-07
652531	Housing Assy, No. 4 Bearing	JT8D	72-37-07
652532	Housing Assy, No. 4 Bearing	JT8D	72-37-07
652533	Housing Assy, No. 4 Bearing	JT8D	72-37-07
653130	Ring Assy, Air Seal, 13th Stage	JT8D	72-37-05
653585	Ring Assy, Air Seal, 13th Stage	JT8D	72-37-05
654342	Disk-Turbine, 2nd Stage	JT8D	72-53-16

JETAIR SUPPORT, INC.

CAPABILITY LIST JT8D and JT8D-200

655882	Stator, 2nd Stage	JT8D	72-33-53
655985	Exhaust Case, Turbine	JT8D	72-54-01
655987	Duct & Fairing Assy	JT8D	72-54-02
656238	Duct & Fairing Assy	JT8D	72-54-02
656239	Duct & Fairing Assy	JT8D	72-54-02
656774	Duct, Fan Exhaust Inner Duct Segments	JT8D	72-54-81
656805	Spacer-Compressor, 1 to 2nd Stage	JT8D	72-33-41
656806	Spacer-Compressor, 1 to 2nd Stage	JT8D	72-33-41
656813	Spacer-Compressor, 2 to 3rd Stage	JT8D	72-33-42
656814	Spacer-Compressor, 3 to 4th Stage	JT8D	72-33-43
656815	Spacer-Compressor, 3 to 4th Stage	JT8D	72-33-43
656816	Spacer-Compressor, 4 to 5th Stage	JT8D	72-33-44
656817	Spacer-Compressor, 4 to 5th Stage	JT8D	72-33-44
656818	Spacer-Compressor, 5 to 6th Stage	JT8D	72-33-45
656819	Spacer-Compressor, 5 to 6th Stage	JT8D	72-33-45
656820	Spacer-Compressor, 5 to 6th Stage	JT8D	72-33-45
656860	Duct & Fairing Assy	JT8D	72-54-02
657346	Case, Combustion Chamber Inner	JT8D	72-41-10
657347	Case, Combustion Chamber Inner	JT8D	72-41-10
657841	Oil Seal Ring, No. 4 Bearing	JT8D	72-37-08
657994	Stator, 4th Stage	JT8D	72-33-55
658472	Stator, 2nd Stage	JT8D	72-33-53
660072	Stator, 2nd Stage	JT8D	72-33-53
660469	Spacer-Compressor, 3 to 4th Stage	JT8D	72-33-43
660515	Rear Support, Combustion Chamber	JT8D	72-51-21
660649	Spacer-Compressor, 3 to 4th Stage	JT8D	72-33-43
660650	Spacer-Compressor, 4 to 5th Stage	JT8D	72-33-44
660653	Spacer-Compressor, 5 to 6th Stage	JT8D	72-33-45
660655	Spacer-Compressor, 3 to 4th Stage	JT8D	72-33-43
660656	Spacer-Compressor, 4 to 5th Stage	JT8D	72-33-44
660657	Spacer-Compressor, 5 to 6th Stage	JT8D	72-33-45
660658	Spacer-Compressor, 1 to 2nd Stage	JT8D	72-33-41
660958	Spacer-Compressor, 5 to 6th Stage	JT8D	72-33-45
661372	Heatshield, Inner-No. 4 & 5 Bearing	JT8D	72-41-01
662147	Exhaust Case, Turbine	JT8D	72-54-01
662148	Exhaust Case, Turbine	JT8D	72-54-01
662149	Housing Assy, No. 6 Bearing	JT8D	72-54-19
662150	Housing Assy, No. 6 Bearing	JT8D	72-54-17
662608	Duct, Outer - Front Compressor	JT8D	72-34-07
662611	Duct, Outer - Front Compressor	JT8D	72-34-09
662613	Duct, Outer - Front Compressor	JT8D	72-34-07
662643	Duct, Outer - Front Compressor	JT8D	72-34-07
664209	No. 4 1/2 & 6 Shield and Tube Assy	JT8D	72-53-30
664405	Rear Support, Combustion Chamber	JT8D	72-51-21
664643	Housing Assy, Gearbox Rear	JT8D	72-61-01
664644	Housing Assy, Gearbox Rear	JT8D	72-61-01

JETAIR SUPPORT, INC.

CAPABILITY LIST JT8D and JT8D-200

664840	Case, Diffuser	JT8D	72-37-01
665590	Duct, Outer - Front Compressor	JT8D	72-34-07
665711	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
665752	Shroud, Turbine - 2nd Stage	JT8D	72-53-56
665772	Shroud Assy, 2nd Stage	JT8D	72-53-56
665993	Case, Diffuser	JT8D	72-37-01
666742	Housing Assy, Gearbox Rear	JT8D	72-61-01
666743	Housing Assy, Gearbox Rear	JT8D	72-61-01
667487	Housing Assy, Gearbox Rear	JT8D	72-61-01
667488	Housing Assy, Gearbox Rear	JT8D	72-61-01
667993	Inner Outlet Duct	JT8D	72-51-22
667996	Outer Outlet Duct	JT8D	72-51-23
667997	Rear Support, Combustion Chamber	JT8D	72-51-21
667998	Duct, Fan Exhaust Outer	JT8D	72-54-30
668906	Disk-Compressor, 6th Stage	JT8D	72-33-37
669424	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
669426	Duct Assy, Fan Diffuser, Left	JT8D	72-71-02
669472	Duct, Fan Exhaust Outer	JT8D	72-54-30
671804	Hub, Rear - Front Compressor, 4th Stage	JT8D	72-33-35
671904	Hub, Rear - Front Compressor	JT8D	72-33-35
672904	Hub, Rear - Front Compressor	JT8D	72-33-35
673107	Duct, Outer - Front Compressor	JT8D	72-34-07
673108	Duct, Outer - Front Compressor	JT8D	72-34-07
673109	Duct, Outer - Front Compressor	JT8D	72-34-07
673110	Duct, Outer - Front Compressor	JT8D	72-34-07
673111	Duct, Outer - Front Compressor	JT8D	72-34-07
673112	Duct, Outer - Front Compressor	JT8D	72-34-07
673146	Duct, Outer - Front Compressor	JT8D	72-34-07
673147	Duct, Outer - Front Compressor	JT8D	72-34-07
674527	Rear Support, Combustion Chamber	JT8D	72-51-21
674530	Rear Support, Combustion Chamber	JT8D	72-51-21
674764	Outer Outlet Duct	JT8D	72-51-23
674890	Rear Support, Combustion Chamber	JT8D	72-51-21
676372	Stator, 2nd Stage	JT8D	72-33-53
676392	Stator, 2nd Stage	JT8D	72-33-53
676393	Stator, 3rd Stage	JT8D	72-33-54
676472	Stator, 2nd Stage	JT8D	72-33-53
676822	Disk-Turbine, 2nd Stage	JT8D	72-53-16
676918	Damper, No. 5 Bearing	JT8D	72-41-21
676919	Plate-Retaining, No. 5 Bearing	JT8D	72-41-22
676923	Support, No. 5 Bearing Seal	JT8D	72-52-11
676952	Housing Assy, No. 5 Bearing	JT8D	72-41-24
676954	Heatshield, Inner-No. 4 & 5 Bearing	JT8D	72-41-01
678030	Duct Segment, Fan Turbine Inner	JT8D	72-71-05
678181	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
678182	Duct Assy, Fan Diffuser, Left	JT8D	72-71-02

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

678187	Duct Assy, Fan Diffuser, Left	JT8D	72-71-02
678202	Disk-Compressor, 2nd Stage	JT8D	72-33-33
678697	Rear Support, Combustion Chamber	JT8D	72-51-21
690005	Disk-Compressor, 5th Stage	JT8D	72-33-36
690620	Housing Assy, No. 1 Bearing	JT8D	72-23-02
690790	Spacer-Compressor, 7 to 8th Stage	JT8D	72-36-11
690791	Spacer-Compressor, 8 to 9th Stage	JT8D	72-36-12
690792	Spacer-Compressor, 9 to 10th Stage	JT8D	72-36-13
690793	Spacer-Compressor, 10 to 11th Stage	JT8D	72-36-14
690795	Spacer-Compressor, 12 to 13th Stage	JT8D	72-36-16
690796	Spacer-Compressor, 11 to 12th Stage	JT8D	72-36-15
690882	Stator, 2nd Stage	JT8D	72-33-53
690883	Air Seal, Compressor - 2nd Stage	JT8D	72-33-16
690908	Hub, Front - Rear Compressor, 8th Stage	JT8D	72-36-42
691334	Hub, Rear - Front Compressor	JT8D	72-33-35
691344	Hub, Rear - Front Compressor	JT8D	72-33-35
691834	Oil Seal Ring, No. 4 Bearing	JT8D	72-37-08
692304	Hub, Rear - Front Compressor	JT8D	72-33-35
692404	Hub, Rear - Front Compressor, 4th Stage	JT8D	72-33-35
692424	Hub, Rear - Front Compressor, 4th Stage	JT8D	72-33-35
692439	Case, Diffuser	JT8D	72-37-01
692440	Case, Diffuser	JT8D	72-37-01
692504	Hub, Rear - Front Compressor	JT8D	72-33-35
692595	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
692799	Case, Diffuser	JT8D	72-37-01
692877	Case, Diffuser	JT8D	72-37-01
692894	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
693177	Oil Nozzle, No. 2 & No. 3 Bearing	JT8D	72-34-09
694286	Case, Diffuser	JT8D	72-37-01
694287	Case, Diffuser	JT8D	72-37-01
695304	Hub, Rear - Front Compressor	JT8D	72-33-35
695587	Seal, 7th Stage	JT8D	72-36-22
695588	Spacer-Compressor, 7 to 8th Stage	JT8D	72-36-11
695607	Disk-Compressor, 7th Stage	JT8D	72-36-41
696564	Exhaust Case, Turbine	JT8D	72-54-01
696726	Duct, (TOBI) Turbine Cooling Air	JT8D	72-51-10
696735	Support-Air duct, Cooling	JT8D-200	72-51-01
696801	Disk-Turbine, 1st Stage	JT8D	72-52-02
696858	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
696859	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
697115	Case, Turbine Front	JT8D	72-51-02
697372	Spacer, No. 3 Bearing	JT8D	72-34-36
697373	Seal Assy, No. 3 Bearing	JT8D	72-34-40
697417	Case, Diffuser	JT8D	72-37-01
697418	Case, Diffuser	JT8D	72-37-01
697533	Case, Diffuser	JT8D	72-37-01

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

697534	Case, Diffuser	JT8D	72-37-01
697666	Housing Assy, Gearbox Rear	JT8D	72-61-01
697667	Housing Assy, Gearbox Front	JT8D	72-61-02
697724	Hub, Rear - Front Compressor	JT8D	72-33-35
697734	Hub, Rear - Front Compressor	JT8D	72-33-35
698145	Hub, Front - Rear Compressor	JT8D	72-36-17
698147	Hub, Front - Rear Compressor	JT8D	72-36-17
698148	Seal Assy, No. 3 Bearing	JT8D	72-34-40
698149	Hub, Front - Rear Compressor	JT8D	72-36-17
698157	Seal Assy, No. 3 Bearing	JT8D	72-34-40
698307	Disk-Compressor, 7th Stage	JT8D	72-36-41
698604	Shaft, Turb - Rear Comp Drive (T1)	JT8D	72-52-03
698623	Stator, 3rd Stage	JT8D	72-33-54
698624	Stator, 4th Stage	JT8D	72-33-55
698927	Ring Assy, Air Seal, 13th Stage	JT8D	72-37-05
699013	Disk-Compressor, 13th Stage	JT8D	72-36-47
699113	Disk-Compressor, 13th Stage	JT8D	72-36-47
699155	Housing Assy, No. 3 Bearing	JT8D	72-34-32
699208	Disk-Compressor, 8th Stage	JT8D	72-36-42
699309	Disk-Compressor, 9th Stage	JT8D	72-36-43
699310	Disk-Compressor, 10th Stage	JT8D	72-36-44
699311	Disk-Compressor, 11th Stage	JT8D	72-36-45
699312	Disk-Compressor, 12th Stage	JT8D	72-36-46
699332	Exhaust Case, Turbine	JT8D	72-54-01
699707	Disk-Compressor, 7th Stage	JT8D	72-36-41
701308	Hub, Front - Rear Compressor, 8th Stage	JT8D	72-36-42
701344	Hub, Rear - Front Compressor, 4th Stage	JT8D	72-33-35
701407	Disk-Compressor, 7th Stage	JT8D	72-36-41
701408	Disk-Compressor, 8th Stage	JT8D	72-36-42
701410	Disk-Compressor, 10th Stage	JT8D	72-36-44
701411	Disk-Compressor, 11th Stage	JT8D	72-36-45
701412	Disk-Compressor, 12th Stage	JT8D	72-36-46
701507	Disk-Compressor, 7th Stage	JT8D	72-36-41
701509	Disk-Compressor, 9th Stage	JT8D	72-36-43
701996	Case, Diffuser	JT8D	72-37-01
701997	Case, Diffuser	JT8D	72-37-01
701998	Case, Diffuser	JT8D	72-37-01
702030	Case, Diffuser	JT8D	72-37-01
702035	Case, Diffuser	JT8D	72-37-01
702382	Stator, 2nd Stage	JT8D	72-33-53
702482	Stator, 2nd Stage	JT8D	72-33-53
702689	Rear Support, Combustion Chamber	JT8D	72-51-21
702694	Duct Assy, Combustion Chamber	JT8D	72-51-15
702697	Case, Combustion Chamber Inner	JT8D	72-41-10
702698	Support, Turbine Stator	JT8D	72-51-01
702700	Housing Assy, No. 5 Bearing	JT8D	72-41-24

JETAIR SUPPORT, INC.

CAPABILITY LIST JT8D and JT8D-200

703031	Inner Outlet Duct	JT8D	72-51-22
703973	Duct Assy, Combustion Chamber	JT8D	72-51-21
704473	Stator, 3rd Stage	JT8D	72-33-54
704474	Stator, 4th Stage	JT8D	72-33-55
704484	Stator, 4th Stage	JT8D	72-33-55
704493	Stator, 3rd Stage	JT8D	72-33-54
706526	Rear Support, Combustion Chamber	JT8D	72-51-21
706537	No. 4 1/2 & 6 Shield and Tube Assy	JT8D	72-53-30
706891	Stator, 1st Stage	JT8D	72-33-51
707471	Fan Case, Rear	JT8D	72-33-67
707472	Fan Case, Rear	JT8D	72-33-67
708303	Case, Diffuser	JT8D	72-37-01
708304	Case, Diffuser	JT8D	72-37-01
708305	Case, Diffuser	JT8D	72-37-01
708322	Case, Diffuser	JT8D	72-37-01
708323	Case, Diffuser	JT8D	72-37-01
708468	Duct Segment, Fan Turbine Inner	JT8D	72-71-05
708692	Shroud Assy, 2nd Stage	JT8D	72-53-56
708852	Shroud, Turbine - 2nd Stage	JT8D	72-53-56
709134	Duct & Fairing Assy	JT8D	72-54-02
709135	Duct & Fairing Assy	JT8D	72-54-02
709136	Duct & Fairing Assy	JT8D	72-54-02
710128	Duct & Fairing Assy	JT8D	72-54-02
711224	Damper, No. 5 Bearing	JT8D	72-41-21
711366	Case, Turbine Front	JT8D	72-51-02
711573	Housing Assy, No. 5 Bearing	JT8D	72-41-24
711574	Housing Assy, No. 5 Bearing	JT8D	72-41-24
712537	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
712538	Duct Assy, Fan Diffuser, Left	JT8D	72-71-02
712691	Stator, 1st Stage	JT8D	72-33-51
712768	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
712770	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
713105	Disk-Compressor, 5th Stage	JT8D	72-33-36
713669	Case, Diffuser	JT8D	72-37-01
714048	Fan Case, Front	JT8D	72-33-66
714074	Fan Case, Front	JT8D	72-33-66
714081	Stator, 1st Stage	JT8D	72-33-51
714091	Stator, 1st Stage	JT8D	72-33-51
714472	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
714473	Duct Assy, Fan Diffuser, Left	JT8D	72-71-02
714485	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
714486	Duct Assy, Fan Diffuser, Left	JT8D	72-71-02
716117	Duct-Fan, Diffuser, Outer	JT8D	72-38-01
716847	Spacer-Compressor, 1 to 2nd Stage	JT8D	72-33-41
716848	Spacer-Compressor, 1 to 2nd Stage	JT8D	72-33-41
716851	Spacer-Compressor, 3 to 4th Stage	JT8D	72-33-43

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

716853	Spacer-Compressor, 3 to 4th Stage	JT8D	72-33-43
716854	Spacer-Compressor, 3 to 4th Stage	JT8D	72-33-43
716855	Spacer-Compressor, 4 to 5th Stage	JT8D	72-33-43
716856	Spacer-Compressor, 5 to 6th Stage	JT8D	72-33-45
717277	Spacer-Compressor, 7 to 8th Stage	JT8D	72-36-11
717278	Spacer-Compressor, 11 to 12th Stage	JT8D	72-36-15
717279	Spacer-Compressor, 12 to 13th Stage	JT8D	72-36-16
717312	Disk-Compressor, 12th Stage	JT8D	72-36-46
717313	Disk-Compressor, 13th Stage	JT8D	72-36-47
717608	Hub, Front - Rear Compressor, 8th Stage	JT8D	72-36-42
717623	Hub, Front - Rear Compressor	JT8D	72-36-17
717680	Seal, 7th Stage	JT8D	72-36-22
717708	Hub, Front - Rear Compressor, 8th Stage	JT8D	72-36-42
719837	Tube-Seal, Rear Compressor	JT8D	72-36-19
725526	Plate-Retaining, No. 5 Bearing	JT8D	72-41-22
725527	Plate-Retaining, No. 5 Bearing	JT8D	72-41-22
725529	Housing Assy, No. 5 Bearing	JT8D	72-41-24
725533	Housing Assy, No. 5 Bearing	JT8D	72-41-24
725535	Housing Assy, No. 5 Bearing	JT8D	72-41-24
725537	Housing Assy, No. 5 Bearing	JT8D	72-41-24
725822	Hub, Front - Rear Compressor	JT8D	72-36-17
726222	Hub, Front - Rear Compressor	JT8D	72-36-17
726226	Hub, Front - Rear Compressor	JT8D	72-36-17
726227	Hub, Front - Rear Compressor	JT8D	72-36-17
726230	Hub, Front - Rear Compressor	JT8D	72-36-17
726448	Housing Assy, Gearbox Front	JT8D	72-61-02
726547	Case, Combustion Chamber Inner	JT8D	72-41-10
726554	Case, Combustion Chamber Inner	JT8D	72-41-10
726555	Case, Combustion Chamber Inner	JT8D	72-41-10
726556	Case, Combustion Chamber Inner	JT8D	72-41-10
726557	Case, Combustion Chamber Inner	JT8D	72-41-10
726558	Case, Combustion Chamber Inner	JT8D	72-41-10
726559	Case, Combustion Chamber Inner	JT8D	72-41-10
726560	Case, Combustion Chamber Inner	JT8D	72-41-10
726561	Case, Combustion Chamber Inner	JT8D	72-41-10
727311	Rear Support, Combustion Chamber	JT8D	72-51-21
727314	Housing Assy, No. 5 Bearing	JT8D	72-41-24
727440	Case, Diffuser	JT8D	72-37-01
727442	Case, Diffuser	JT8D	72-37-01
727443	Case, Diffuser	JT8D	72-37-01
727444	Case, Diffuser	JT8D	72-37-01
727445	Case, Diffuser	JT8D	72-37-01
727446	Case, Diffuser	JT8D	72-37-01
727696	Fan Case, Front	JT8D	72-33-66
727697	Fan Case, Front	JT8D	72-33-66
727719	Rear Support, Combustion Chamber	JT8D	72-51-21

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

727720	Duct Assy, Combustion Chamber	JT8D	72-51-15
727723	Oil Seal Ring, No. 4 Bearing	JT8D	72-37-08
727739	Case, Diffuser	JT8D	72-37-01
727740	Case, Diffuser	JT8D	72-37-01
727742	Case, Diffuser	JT8D	72-37-01
727744	Case, Diffuser	JT8D	72-37-01
727745	Case, Diffuser	JT8D	72-37-01
727748	Case, Diffuser	JT8D	72-37-01
727749	Case, Diffuser	JT8D	72-37-01
727750	Case, Diffuser	JT8D	72-37-01
727751	Case, Diffuser	JT8D	72-37-01
727752	Case, Diffuser	JT8D	72-37-01
727753	Case, Diffuser	JT8D	72-37-01
727754	Case, Diffuser	JT8D	72-37-01
727755	Case, Diffuser	JT8D	72-37-01
727756	Case, Diffuser	JT8D	72-37-01
727757	Case, Diffuser	JT8D	72-37-01
727758	Case, Diffuser	JT8D	72-37-01
727759	Case, Diffuser	JT8D	72-37-01
727760	Case, Diffuser	JT8D	72-37-01
727762	Case, Diffuser	JT8D	72-37-01
727765	Case, Diffuser	JT8D	72-37-01
727766	Case, Diffuser	JT8D	72-37-01
727776	Case, Diffuser	JT8D	72-37-01
727777	Case, Diffuser	JT8D	72-37-01
727778	Case, Diffuser	JT8D	72-37-01
727779	Case, Diffuser	JT8D	72-37-01
727780	Case, Diffuser	JT8D	72-37-01
727781	Case, Diffuser	JT8D	72-37-01
727782	Case, Diffuser	JT8D	72-37-01
727790	Case, Diffuser	JT8D	72-37-01
727793	Case, Diffuser	JT8D	72-37-01
727794	Case, Diffuser	JT8D	72-37-01
727795	Case, Diffuser	JT8D	72-37-01
727796	Case, Diffuser	JT8D	72-37-01
727797	Case, Diffuser	JT8D	72-37-01
727798	Case, Diffuser	JT8D	72-37-01
727799	Case, Diffuser	JT8D	72-37-01
727850	Case, Diffuser	JT8D	72-37-01
728327	Air Seal-Turbine, 4th Stage	JT8D	72-53-28
728329	No. 4 1/2 & 6 Shield and Tube Assy	JT8D	72-53-30
728729	Spacer-Compressor, 7 to 8th Stage	JT8D	72-36-11
728730	Spacer-Compressor, 8 to 9th Stage	JT8D	72-36-12
728732	Spacer-Compressor, 9 to 10th Stage	JT8D	72-36-13
728733	Spacer-Compressor, 10 to 11th Stage	JT8D	72-36-14
728734	Spacer-Compressor, 11 to 12th Stage	JT8D	72-36-14

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

728735	Spacer-Compressor, 12 to 13th Stage	JT8D	72-36-16
728829	Case, Combustion Chamber Outer	JT8D	72-41-11
728912	Duct, Outer - Front Compressor	JT8D	72-34-07
729259	Air Seal-Turbine, 4th Stage	JT8D	72-53-28
729570	Spacer, No. 3 Bearing	JT8D	72-34-36
729917	Case, Diffuser	JT8D	72-37-01
730202	Disk-Compressor, 2nd Stage	JT8D	72-33-33
730302	Disk-Compressor, 2nd Stage	JT8D	72-33-33
730317	Spacer-Compressor, 1 to 2nd Stage	JT8D	72-33-41
730402	Disk-Compressor, 2nd Stage	JT8D	72-33-33
730413	Case, Combustion Chamber Outer	JT8D	72-41-11
730414	Case, Combustion Chamber Outer	JT8D	72-41-11
734224	Hub, Rear - Front Compressor, 4th Stage	JT8D	72-33-35
734234	Hub, Rear - Front Compressor	JT8D	72-33-35
734244	Hub, Rear - Front Compressor	JT8D	72-33-35
734304	Hub, Rear - Front Compressor, 4th Stage	JT8D	72-33-35
734324	Hub, Rear - Front Compressor	JT8D	72-33-35
734334	Hub, Rear - Front Compressor	JT8D	72-33-35
734344	Hub, Rear - Front Compressor, 4th Stage	JT8D	72-33-35
734404	Hub, Rear - Front Compressor	JT8D	72-33-35
734504	Hub, Rear - Front Compressor	JT8D	72-33-35
734604	Hub, Rear - Front Compressor, 4th Stage	JT8D	72-33-35
734704	Hub, Rear - Front Compressor	JT8D	72-33-35
734804	Hub, Rear - Front Compressor	JT8D	72-33-35
734948	Heat Shield, No. 5 Bearing	JT8D	72-52-13
735844	Case, Combustion Chamber Inner	JT8D	72-41-10
735845	Case, Combustion Chamber Inner	JT8D	72-41-10
735846	Case, Combustion Chamber Inner	JT8D	72-41-10
735850	Case, Combustion Chamber Inner	JT8D	72-41-10
735851	Case, Combustion Chamber Inner	JT8D	72-41-10
735852	Case, Combustion Chamber Inner	JT8D	72-41-10
735854	Case, Combustion Chamber Inner	JT8D	72-41-10
735855	Case, Combustion Chamber Inner	JT8D	72-41-10
735856	Case, Combustion Chamber Inner	JT8D	72-41-10
735883	Inner Outlet Duct	JT8D	72-51-22
735884	Duct Assy, Combustion Chamber	JT8D	72-51-15
737229	Duct, (TOBI) Turbine Cooling Air	JT8D	72-51-10
738254	Spacer-Compressor, 11 to 12th Stage	JT8D	72-36-15
738308	Hub, Front - Rear Compressor, 8th Stage	JT8D	72-36-42
738311	Disk-Compressor, 11th Stage	JT8D	72-36-45
739509	Disk-Compressor, 9th Stage	JT8D	72-36-43
739836	Case, Diffuser	JT8D	72-37-01
739837	Case, Diffuser	JT8D	72-37-01
740104	Hub, Rear - Front Compressor	JT8D	72-33-35
740204	Hub, Rear - Front Compressor, 4th Stage	JT8D	72-33-35
740304	Hub, Rear - Front Compressor	JT8D	72-33-35

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

740502	Disk-Compressor, 2nd Stage	JT8D	72-33-33
740694	Housing Assy, No. 6 Bearing	JT8D	72-54-17
740826	Housing Assy, No. 6 Bearing	JT8D	72-54-17
741219	Air Seal Ring, Turb. - 4th Stage Outer	JT8D	72-53-61
741574	Case, Diffuser	JT8D	72-37-01
742501	Disk-Turbine, 1st Stage	JT8D	72-52-02
743301	Hub, Front - Front Compressor	JT8D	72-33-31
743804	Hub, Rear - Front Compressor	JT8D	72-33-35
743824	Hub, Rear - Front Compressor	JT8D	72-33-35
743834	Hub, Rear - Front Compressor	JT8D	72-33-35
743904	Hub, Rear - Front Compressor, 4th Stage	JT8D	72-33-35
744304	Hub, Rear - Front Compressor	JT8D	72-33-35
744324	Hub, Rear - Front Compressor	JT8D	72-33-35
744334	Hub, Rear - Front Compressor	JT8D	72-33-35
744344	Hub, Rear - Front Compressor, 4th Stage	JT8D	72-33-35
744424	Hub, Rear - Front Compressor, 4th Stage	JT8D	72-33-35
744444	Hub, Rear - Front Compressor	JT8D	72-33-35
744504	Hub, Rear - Front Compressor, 4th Stage	JT8D	72-33-35
744524	Hub, Rear - Front Compressor, 4th Stage	JT8D	72-33-35
744534	Hub, Rear - Front Compressor	JT8D	72-33-35
744544	Hub, Rear - Front Compressor, 4th Stage	JT8D	72-33-35
744704	Hub, Rear - Front Compressor	JT8D	72-33-35
744724	Hub, Rear - Front Compressor	JT8D	72-33-35
744734	Hub, Rear - Front Compressor	JT8D	72-33-35
744757	Duct, (TOBI) Turbine Cooling Air	JT8D	72-51-10
744758	Duct, (TOBI) Turbine Cooling Air	JT8D	72-51-10
744762	Support, Turbine Stator	JT8D	72-51-01
744804	Hub, Rear - Front Compressor	JT8D	72-33-35
744904	Hub, Rear - Front Compressor	JT8D	72-33-35
745004	Hub, Rear - Front Compressor, 4th Stage	JT8D	72-33-35
745104	Hub, Rear - Front Compressor	JT8D	72-33-35
745204	Hub, Rear - Front Compressor	JT8D	72-33-35
745304	Hub, Rear - Front Compressor, 4th Stage	JT8D	72-33-35
745404	Hub, Rear - Front Compressor	JT8D	72-33-35
745533	Disk-Compressor, 3rd Stage	JT8D	72-33-34
745534	Air Seal, Compressor - 2nd Stage	JT8D	72-33-16
745648	Case, Diffuser	JT8D	72-37-01
745702	Disk-Compressor, 2nd Stage	JT8D	72-33-33
745704	Hub, Rear - Front Compressor	JT8D	72-33-35
745705	Disk-Compressor, 5th Stage	JT8D	72-33-36
745706	Disk-Compressor, 6th Stage	JT8D	72-33-37
745803	Disk-Compressor, 3rd Stage	JT8D	72-33-34
745902	Disk-Compressor, 2nd Stage	JT8D	72-33-33
746002	Disk-Compressor, 2nd Stage	JT8D	72-33-33
746003	Disk-Turbine, 3rd Stage	JT8D	72-53-17
746059	Duct Assy, Combustion Chamber	JT8D	72-51-15

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

746802	Disk-Compressor, 2nd Stage	JT8D	72-33-33
747437	Case, Diffuser	JT8D	72-37-01
748285	Combustion Chamber	JT8D	72-41-14
748286	Combustion Chamber	JT8D	72-41-14
748461	Duct Assy, Combustion Chamber	JT8D	72-51-15
748462	Case, Combustion Chamber Inner	JT8D	72-41-10
748463	Case, Combustion Chamber Inner	JT8D	72-41-10
748464	Case, Diffuser	JT8D	72-37-01
748466	Case, Diffuser	JT8D	72-37-01
748467	Case, Diffuser	JT8D	72-37-01
748469	Case, Diffuser	JT8D	72-37-01
748540	Spacer-Compressor, 7 to 8th Stage	JT8D	72-36-11
748541	Spacer-Compressor, 8 to 9th Stage	JT8D	72-36-12
748608	Disk-Compressor, 8th Stage	JT8D	72-36-42
749362	Spacer-Compressor, 7 to 8th Stage	JT8D	72-36-11
749363	Spacer-Compressor, 8 to 9th Stage	JT8D	72-36-12
749364	Spacer-Compressor, 7 to 8th Stage	JT8D	72-36-11
749365	Spacer-Compressor, 8 to 9th Stage	JT8D	72-36-12
749612	Inner Shield, No. 4 and 5 Bearing	JT8D-200	72-41-02
749684	Case, Diffuser	JT8D	72-37-01
749701	Hub, Front - Front Compressor	JT8D	72-33-31
749801	Hub, Front - Front Compressor	JT8D	72-33-31
750001	Hub, Front - Front Compressor	JT8D	72-33-31
750101	Hub, Front - Front Compressor	JT8D	72-33-31
750222	Disk-Turbine, 2nd Stage	JT8D	72-53-16
750309	Case, Diffuser	JT8D	72-37-01
750336	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
750337	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
750338	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
750340	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
750342	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
750343	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
750344	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
750345	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
750347	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
750348	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
750349	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
750376	Case, Diffuser	JT8D	72-37-01
750377	Case, Diffuser	JT8D	72-37-01
750378	Case, Diffuser	JT8D	72-37-01
750379	Case, Diffuser	JT8D	72-37-01
750385	Case, Combustion Chamber Inner	JT8D	72-41-10
750386	Case, Combustion Chamber Inner	JT8D	72-41-10
750387	Case, Combustion Chamber Inner	JT8D	72-41-10
751161	Case, Diffuser	JT8D	72-37-01
751162	Case, Diffuser	JT8D	72-37-01

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

751163	Case, Diffuser	JT8D	72-37-01
751164	Case, Diffuser	JT8D	72-37-01
751165	Case, Diffuser	JT8D	72-37-01
751304	Hub-Turbine, 4th Stage	JT8D	72-53-18(19)
752174	Case, Diffuser	JT8D	72-35-01
752175	Case, Diffuser	JT8D	72-37-01
752176	Case, Diffuser	JT8D	72-37-01
752181	Case, Diffuser	JT8D	72-37-01
752193	Case, Combustion Chamber Inner	JT8D	72-41-10
752401	Disk-Turbine, 1st Stage	JT8D	72-52-02
753544	Spacer-Compressor, 11 to 12th Stage	JT8D	72-36-11
753545	Spacer-Compressor, 12 to 13th Stage	JT8D	72-36-16
753799	Duct, Fan Exhaust Inner Duct Segments	JT8D	72-54-81
753804	Duct, Fan Exhaust Inner Duct Segments	JT8D	72-54-81
753855	Spacer-Compressor, 11 to 12th Stage	JT8D	72-36-15
753856	Spacer-Compressor, 11 to 12th Stage	JT8D	72-36-15
753858	Spacer-Compressor, 11 to 12th Stage	JT8D	72-36-15
753859	Spacer-Compressor, 12 to 13th Stage	JT8D	72-36-16
754234	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
754555	Case, Diffuser	JT8D	72-37-01
754556	Case, Diffuser	JT8D	72-37-01
754557	Case, Diffuser	JT8D	72-37-01
754558	Case, Diffuser	JT8D	72-37-01
754559	Case, Diffuser	JT8D	72-37-01
754560	Case, Diffuser	JT8D	72-37-01
754561	Case, Diffuser	JT8D	72-37-01
754856	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
754860	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
754862	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
754866	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
754945	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
755164	Fan Case, Front	JT8D	72-33-66
755166	Fan Case, Rear	JT8D	72-33-67
756776	Duct Segment, Fan Turbine Inner	JT8D	72-71-05
756854	Duct & Fairing Assy	JT8D	72-54-02
757003	Disk-Turbine, 3rd Stage	JT8D	72-53-17
757103	Disk-Turbine, 3rd Stage	JT8D	72-53-17
757244	Duct, Fan Exhaust Outer	JT8D	72-54-30
757245	Duct, Fan Exhaust Outer	JT8D	72-54-30
757503	Disk-Turbine, 3rd Stage	JT8D	72-53-17
758275	Housing Assy, No. 1 Bearing	JT8D-200	72-23-02
760266	Spacer-Compressor, 9 to 10th Stage	JT8D	72-36-13
760267	Spacer-Compressor, 10 to 11th Stage	JT8D	72-36-14
760297	Retaining Plate, Blade - 1st Stage	JT8D	72-33-15
760402	Disk-Compressor, 2nd Stage	JT8D	72-33-33
760502	Disk-Compressor, 2nd Stage	JT8D	72-33-33

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

760707	Disk-Compressor, 7th Stage	JT8D	72-36-41
761010	Disk-Compressor, 10th Stage	JT8D	72-36-44
761812	Exhaust Case, Turbine	JT8D	72-54-01
761973	Shroud Assy, 3rd Stage	JT8D	72-53-57
761974	Shroud Assy, 4th Stage	JT8D	72-53-58
761983	Shroud Assy, 3rd Stage	JT8D	72-53-57
761984	Shroud Assy, 4th Stage	JT8D	72-53-58
761993	Shroud Assy, 3rd Stage	JT8D	72-53-57
761994	Shroud Assy, 4th Stage	JT8D	72-53-58
762064	Duct Assy, Fan Diffuser, Left	JT8D	72-71-02
762065	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
762083	Shroud Assy, 3rd Stage	JT8D	72-53-57
762084	Shroud Assy, 4th Stage	JT8D	72-53-58
762136	Spacer-Compressor, 1 to 2nd Stage	JT8D	72-33-41
762137	Spacer-Compressor, 1 to 2nd Stage	JT8D	72-33-41
762138	Spacer-Compressor, 4 to 5th Stage	JT8D	72-33-44
762139	Spacer-Compressor, 5 to 6th Stage	JT8D	72-33-45
762140	Spacer-Compressor, 3 to 4th Stage	JT8D	72-33-43
762142	Spacer-Compressor, 4 to 5th Stage	JT8D	72-33-44
762143	Spacer-Compressor, 5 to 6th Stage	JT8D	72-33-45
762144	Spacer-Compressor, 5 to 6th Stage	JT8D	72-33-45
762145	Spacer-Compressor, 3 to 4th Stage	JT8D	72-33-43
762270	Spacer-Compressor, 1 to 2nd Stage	JT8D	72-33-41
762336	Spacer-Compressor, 9 to 10th Stage	JT8D	72-36-13
762337	Spacer-Compressor, 9 to 10th Stage	JT8D	72-36-13
762338	Spacer-Compressor, 9 to 10th Stage	JT8D	72-36-13
762339	Spacer-Compressor, 10 to 11th Stage	JT8D	72-36-14
762340	Spacer-Compressor, 10 to 11th Stage	JT8D	72-36-14
762342	Spacer-Compressor, 10 to 11th Stage	JT8D	72-36-14
762420	Exhaust Case, Turbine	JT8D	72-54-01
762425	Air Seal-Turbine, 2nd Stage	JT8D-200	72-53-26
762438	Spacer-Compressor, 1 to 2nd Stage	JT8D	72-33-41
762442	Exhaust Case, Turbine	JT8D	72-54-01
762443	Exhaust Case, Turbine	JT8D	72-54-01
762444	Exhaust Case, Turbine	JT8D	72-54-01
762445	Exhaust Case, Turbine	JT8D	72-54-01
762446	Exhaust Case, Turbine	JT8D	72-54-01
762448	Exhaust Case, Turbine	JT8D	72-54-01
762462	Exhaust Case, Turbine	JT8D	72-54-01
762467	Spacer-Compressor, 1 to 2nd Stage	JT8D	72-33-41
762468	Spacer-Compressor, 3 to 4th Stage	JT8D	72-33-41
762604	Hub, Rear - Front Compressor	JT8D	72-33-35
762725	Spacer-Compressor, 11 to 12th Stage	JT8D	72-36-15
762726	Spacer-Compressor, 11 to 12th Stage	JT8D	72-36-15
762727	Spacer-Compressor, 12 to 13th Stage	JT8D	72-36-16
762728	Spacer-Compressor, 12 to 13th Stage	JT8D	72-36-16

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

762729	Spacer-Compressor, 12 to 13th Stage	JT8D	72-36-16
765152	Duct, Outer - Front Compressor	JT8D	72-34-07
765274	Fan Case, Front	JT8D	72-33-66
765276	Fan Case, Front	JT8D	72-33-66
765278	Fan Case, Front	JT8D	72-33-66
765469	Support, Rear-No. 1 Bearing	JT8D	72-23-03
765471	Housing Assy, No. 1 Bearing	JT8D	72-23-02
765754	Support, Turbine Stator	JT8D	72-51-01
765758	Case, Combustion Chamber Inner	JT8D	72-41-10
765759	Case, Combustion Chamber Inner	JT8D	72-41-10
765784	Spacer-Compressor, 11 to 12th Stage	JT8D	72-36-15
766007	Disk-Compressor, 7th Stage	JT8D	72-36-41
766231	Housing Assy, Gearbox Front	JT8D-200	72-61-02
766293	Duct & Fairing Assy	JT8D	72-54-02
766295	Duct & Fairing Assy	JT8D	72-54-02
766419	Case, Combustion Chamber Inner	JT8D	72-41-10
767197	Case, Combustion Chamber Outer	JT8D	72-41-11
767279	Case, Combustion Chamber Outer	JT8D	72-41-11
767284	Duct Assy, Fan Diffuser, Left	JT8D	72-71-02
767285	Duct Assy, Fan Diffuser, Left	JT8D	72-71-02
767286	Duct Assy, Fan Diffuser, Left	JT8D	72-71-02
767287	Duct Assy, Fan Diffuser, Left	JT8D	72-71-02
767288	Duct Assy, Fan Diffuser, Left	JT8D	72-71-02
767289	Duct Assy, Fan Diffuser, Left	JT8D	72-71-02
767290	Duct Assy, Fan Diffuser, Left	JT8D	72-71-02
767425	Support Assy, No. 4 Bearing	JT8D-200	72-37-08
767441	Seal Assy, No. 4 Bearing	JT8D-200	72-36-80
767448	Hub, Rear - Rear Compressor	JT8D-200	72-36-18
767601	Disk-Turbine, 1st Stage	JT8D	72-52-02
768453	Air Seal-Turbine, 4th Stage	JT8D	72-53-28
768877	Housing Assy, No. 4 Bearing	JT8D	72-37-07
769047	Hub-Turbine, 4th Stage	JT8D	72-53-18(19)
769104	Disk-Turbine, 4th Stage	JT8D	72-53-15
769128	Air Seal-Turbine, 4th Stage	JT8D	72-53-28
769311	Disk-Compressor, 11th Stage	JT8D	72-36-45
769312	Disk-Compressor, 12th Stage	JT8D	72-36-46
769411	Disk-Compressor, 11th Stage	JT8D	72-36-45
769412	Disk-Compressor, 12th Stage	JT8D	72-36-46
769511	Disk-Compressor, 11th Stage	JT8D	72-36-45
769512	Disk-Compressor, 12th Stage	JT8D	72-36-46
769588	Duct, Fan Exhaust Inner Duct Segments	JT8D	72-54-81
769611	Disk-Compressor, 11th Stage	JT8D	72-36-45
769612	Disk-Compressor, 12th Stage	JT8D	72-36-46
769703	Disk-Turbine, 3rd Stage	JT8D	72-53-17
769722	Disk-Turbine, 2nd Stage	JT8D	72-53-16
769732	Disk-Turbine, 2nd Stage	JT8D	72-53-16

JETAIR SUPPORT, INC.

CAPABILITY LIST JT8D and JT8D-200

769777	Case, Diffuser	JT8D	72-37-01
769778	Case, Diffuser	JT8D	72-37-01
769779	Case, Diffuser	JT8D	72-37-01
769780	Case, Diffuser	JT8D	72-37-01
769782	Support, Turbine Stator	JT8D	72-51-01
769783	Support, Turbine Stator	JT8D	72-51-01
769822	Disk-Turbine, 2nd Stage	JT8D	72-53-16
769832	Disk-Turbine, 2nd Stage	JT8D	72-53-16
769842	Disk-Turbine, 2nd Stage	JT8D	72-53-16
770003	Disk-Turbine, 3rd Stage	JT8D	72-53-17
770122	Disk-Turbine, 2nd Stage	JT8D	72-53-16
770178	Case, Diffuser	JT8D	72-37-01
770203	Disk-Turbine, 3rd Stage	JT8D	72-53-17
770222	Disk-Turbine, 2nd Stage	JT8D	72-53-16
770303	Disk-Turbine, 3rd Stage	JT8D	72-53-17
770310	Disk-Compressor, 10th Stage	JT8D	72-36-44
770322	Disk-Turbine, 2nd Stage	JT8D	72-53-16
770373	Case, Diffuser	JT8D	72-37-01
770374	Case, Diffuser	JT8D	72-37-01
770375	Case, Diffuser	JT8D	72-37-01
770376	Case, Diffuser	JT8D	72-37-01
770377	Case, Diffuser	JT8D	72-37-01
770378	Case, Diffuser	JT8D	72-37-01
770379	Case, Diffuser	JT8D	72-37-01
770382	Case, Diffuser	JT8D	72-37-01
770383	Case, Diffuser	JT8D	72-37-01
770384	Case, Diffuser	JT8D	72-37-01
770385	Case, Diffuser	JT8D	72-37-01
770386	Case, Diffuser	JT8D	72-37-01
770387	Case, Diffuser	JT8D	72-37-01
770388	Case, Diffuser	JT8D	72-37-01
770389	Case, Diffuser	JT8D	72-37-01
770390	Case, Diffuser	JT8D	72-37-01
770403	Disk-Turbine, 3rd Stage	JT8D	72-53-17
770410	Disk-Compressor, 10th Stage	JT8D	72-36-44
770510	Disk-Compressor, 10th Stage	JT8D	72-36-44
770603	Disk-Turbine, 3rd Stage	JT8D	72-53-17
770610	Disk-Compressor, 10th Stage	JT8D	72-36-44
770703	Disk-Turbine, 3rd Stage	JT8D	72-53-17
771013	Disk-Compressor, 13th Stage	JT8D	72-36-47
771098	Heatshield, Inner-No. 4 & 5 Bearing	JT8D	72-41-01
771122	Disk-Turbine, 2nd Stage	JT8D	72-53-16
771242	Disk-Turbine, 2nd Stage	JT8D	72-53-16
771868	Retaining Plate, Blade - 1st Stage	JT8D	72-33-15
771896	Housing Assy, No. 4 Bearing	JT8D	72-37-07
772061	Spacer, No. 3 Bearing	JT8D	72-34-36

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

772062	Seal Assy, No. 3 Bearing	JT8D	72-34-40
772293	Hub, Rear - Rear Compressor	JT8D	72-36-18
772402	Disk-Compressor, 2nd Stage	JT8D-200	72-33-33
772509	Disk-Compressor, 9th Stage	JT8D	72-36-43
772510	Disk-Compressor, 10th Stage	JT8D	72-36-44
772511	Disk-Compressor, 11th Stage	JT8D	72-36-45
772592	Air Seal-Turbine, 3rd Stage	JT8D-200	72-53-27
772803	Disk-Compressor, 3rd Stage	JT8D-200	72-33-34
772805	Disk-Compressor, 5th Stage	JT8D-200	72-33-36
772806	Disk-Compressor, 6th Stage	JT8D-200	72-33-37
772903	Disk-Turbine, 3rd Stage	JT8D	72-53-17
773002	Support, Turbine Stator	JT8D	72-51-01
773067	Duct, (TOBI) Turbine Cooling Air	JT8D	72-51-10
773068	Duct, (TOBI) Turbine Cooling Air	JT8D	72-51-10
773108	Outer Outlet Duct	JT8D	72-51-23
773109	Outer Outlet Duct	JT8D	72-51-23
773110	Outer Outlet Duct	JT8D	72-51-23
773111	Outer Outlet Duct	JT8D	72-51-23
773168	Spacer-Compressor, 8 to 9th Stage	JT8D	72-36-12
773169	Spacer-Compressor, 9 to 10th Stage	JT8D	72-36-13
773170	Spacer-Compressor, 10 to 11th Stage	JT8D	72-36-14
773172	Spacer-Compressor, 11 to 12th Stage	JT8D	72-36-15
773173	Spacer-Compressor, 12 to 13th Stage	JT8D	72-36-16
773174	Spacer-Compressor, 9 to 10th Stage	JT8D	72-36-13
773177	Spacer-Compressor, 9 to 10th Stage	JT8D	72-36-13
773178	Spacer-Compressor, 10 to 11th Stage	JT8D	72-36-14
773179	Spacer-Compressor, 10 to 11th Stage	JT8D	72-36-14
773180	Spacer-Compressor, 10 to 11th Stage	JT8D	72-36-14
773182	Spacer-Compressor, 11 to 12th Stage	JT8D	72-36-15
773183	Spacer-Compressor, 11 to 12th Stage	JT8D	72-36-15
773184	Spacer-Compressor, 11 to 12th Stage	JT8D	72-36-15
773186	Spacer-Compressor, 11 to 12th Stage	JT8D	72-36-15
773774	Case, Diffuser	JT8D	72-37-01
774338	Case, Combustion Chamber Inner	JT8D	72-41-10
774407	Disk-Compressor, 7th Stage	JT8D	72-36-41
774879	Duct Segment, Fan Exh, R, Rear	JT8D	72-55-08
775437	Duct Assy, Fan Diffuser	JT8D-200	72-38-01
775444	Duct, Fan Exhaust Outer Rear	JT8D-200	72-55-04
775782	Stator, 2nd Stage	JT8D	72-33-53
775956	Case, Turbine Rear	JT8D-200	72-53-51
776151	Housing Assy, Gearbox Front	JT8D	72-61-02
776367	Liner Segment - Fan Exhaust, Upper	JT8D-200	72-54-31
776369	Liner Segment - Fan Exhaust, Lower	JT8D-200	72-54-31
776374	Duct, Fan Exhaust Intmd Inner	JT8D-200	72-54-11
776482	Stator, 2nd Stage•Stator, 2nd Stage	JT8D	72-33-53
776613	Disk-Compressor, 13th Stage	JT8D-200	72-36-47

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

776642	Duct, Fan Exhaust Inner Rear	JT8D-200	72-55-08
777148	Case, Turbine Front	JT8D-200	72-51-02
777190	Support-Front Accessory Drive	JT8D-200	72-21-01
777466	Housing Assy, No. 6 Bearing	JT8D-200	72-54-17
777543	Housing Assy, No. 4 Bearing	JT8D-200	72-37-07
777546	Air Seal-Turbine, 4th Stage	JT8D-200	72-53-28
777603	Disk-Turbine, 3rd Stage	JT8D-200	72-53-17
777604	Disk-Turbine, 4th Stage	JT8D-200	72-53-18
777622	Disk-Turbine, 2nd Stage	JT8D-200	72-53-16
777697	Duct Guide, Fan & Turb. Exhaust	JT8D	72-54-12
777704	Hub, Front - Rear Compressor	JT8D-200	72-33-35
777738	Air Seal Ring, Turb. - 3rd Stage	JT8D-200	72-53-57
777739	Air Seal Ring, Turb. - 4th Stage	JT8D-200	72-53-58
777740	Air Seal Ring, Turb. - 2nd Stage Outer	JT8D-200	72-53-59
777741	Air Seal Ring, Turb. - 3rd Stage Outer	JT8D-200	72-53-60
777742	Air Seal Ring, Turb. - 4th Stage Outer	JT8D-200	72-53-61
777851	Inner Shield, No. 4 and 5 Bearing	JT8D-200	72-41-02
777855	Hub-Turbine, 4th Stage	JT8D-200	72-53-19
777856	Housing Assy, No. 3 Bearing	JT8D	72-34-32
778819	Case, Turbine Exhaust	JT8D-200	72-54-01
778857	Housing Assy, Gearbox Front	JT8D	72-61-02
778870	Case, Turbine Front	JT8D	72-51-02
778901	Hub, Front - Front Compressor	JT8D	72-33-31
778904	Hub, Rear - Front Compressor	JT8D	72-33-35
778965	Duct, Fan Exhaust Outer	JT8D	72-54-30
778966	Duct, Fan Exhaust Outer	JT8D	72-54-30
778969	Housing Assy, Gearbox Front	JT8D-200	72-61-02
779174	Duct & Fairing Assy	JT8D	72-54-02
779180	Duct & Fairing Assy	JT8D	72-54-02
779181	Duct & Fairing Assy	JT8D	72-54-02
779183	Duct & Fairing Assy	JT8D	72-54-02
779184	Duct & Fairing Assy	JT8D	72-54-02
779185	Duct & Fairing Assy	JT8D	72-54-02
779193	Duct & Fairing Assy	JT8D	72-54-02
779729	Duct, Fan Exhaust Outer	JT8D	72-54-30
779731	Seal Assy, No. 3 Bearing	JT8D	72-34-40
779732	Seal Assy, No. 3 Bearing	JT8D	72-34-40
780029	Case, Diffuser	JT8D	72-37-01
780030	Case, Diffuser	JT8D	72-37-01
780032	Case, Diffuser	JT8D	72-37-01
780033	Case, Diffuser	JT8D	72-37-01
780034	Case, Diffuser	JT8D	72-37-01
780035	Case, Diffuser	JT8D	72-37-01
780036	Case, Diffuser	JT8D	72-37-01
780037	Case, Diffuser	JT8D	72-37-01
780038	Case, Diffuser	JT8D	72-37-01

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

780039	Case, Diffuser	JT8D	72-37-01
780040	Case, Diffuser	JT8D	72-37-01
780042	Case, Diffuser	JT8D	72-37-01
780043	Case, Diffuser	JT8D	72-37-01
780044	Case, Diffuser	JT8D	72-37-01
780045	Case, Diffuser	JT8D	72-37-01
780046	Case, Diffuser	JT8D	72-37-01
780047	Case, Diffuser	JT8D	72-37-01
780048	Case, Diffuser	JT8D	72-37-01
780049	Case, Diffuser	JT8D	72-37-01
780103	Case, Diffuser	JT8D	72-37-01
780105	Case, Diffuser	JT8D	72-37-01
780110	Case, Diffuser	JT8D	72-37-01
780111	Case, Diffuser	JT8D	72-37-01
780112	Case, Diffuser	JT8D	72-37-01
780113	Case, Diffuser	JT8D	72-37-01
780114	Case, Diffuser	JT8D	72-37-01
780115	Case, Diffuser	JT8D	72-37-01
780117	Case, Diffuser	JT8D	72-37-01
780118	Case, Diffuser	JT8D	72-37-01
780119	Case, Diffuser	JT8D	72-37-01
780120	Case, Diffuser	JT8D	72-37-01
780122	Case, Diffuser	JT8D	72-37-01
780124	Case, Diffuser	JT8D	72-37-01
780125	Case, Diffuser	JT8D	72-37-01
780126	Case, Diffuser	JT8D	72-37-01
780129	Case, Diffuser	JT8D	72-37-01
780130	Case, Diffuser	JT8D	72-37-01
780132	Case, Diffuser	JT8D	72-37-01
780133	Case, Diffuser	JT8D	72-37-01
780135	Case, Diffuser	JT8D	72-37-01
780136	Case, Diffuser	JT8D	72-37-01
780137	Case, Diffuser	JT8D	72-37-01
780138	Case, Diffuser	JT8D	72-37-01
780139	Case, Diffuser	JT8D	72-37-01
780140	Case, Diffuser	JT8D	72-37-01
780142	Case, Diffuser	JT8D	72-37-01
780143	Case, Diffuser	JT8D	72-37-01
780144	Case, Diffuser	JT8D	72-37-01
780145	Case, Diffuser	JT8D	72-37-01
780146	Case, Diffuser	JT8D	72-37-01
780147	Case, Diffuser	JT8D	72-37-01
780148	Case, Diffuser	JT8D	72-37-01
780149	Case, Diffuser	JT8D	72-37-01
780203	Case, Diffuser	JT8D	72-37-01
780204	Case, Diffuser	JT8D	72-37-01

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

780205	Case, Diffuser	JT8D	72-37-01
780206	Case, Diffuser	JT8D	72-37-01
780210	Case, Diffuser	JT8D	72-37-01
780211	Case, Diffuser	JT8D	72-37-01
780212	Case, Diffuser	JT8D	72-37-01
780213	Case, Diffuser	JT8D	72-37-01
780214	Case, Diffuser	JT8D	72-37-01
780215	Case, Diffuser	JT8D	72-37-01
780216	Case, Diffuser	JT8D	72-37-01
780217	Case, Diffuser	JT8D	72-37-01
780218	Case, Diffuser	JT8D	72-37-01
780219	Case, Diffuser	JT8D	72-37-01
780220	Case, Diffuser	JT8D	72-37-01
780222	Case, Diffuser	JT8D	72-37-01
780223	Case, Diffuser	JT8D	72-37-01
780224	Case, Diffuser	JT8D	72-37-01
780225	Case, Diffuser	JT8D	72-37-01
780227	Case, Diffuser	JT8D	72-37-01
780228	Case, Diffuser	JT8D	72-37-01
780262	Case, Diffuser	JT8D	72-37-01
780310	Case, Diffuser	JT8D	72-37-01
780311	Case, Diffuser	JT8D	72-37-01
780312	Case, Diffuser	JT8D	72-37-01
780313	Case, Diffuser	JT8D	72-37-01
780317	Case, Diffuser	JT8D	72-37-01
780318	Case, Diffuser	JT8D	72-37-01
780328	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
780329	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
780330	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
780557	No. 4 1/2 & 6 Shield and Tube Assy	JT8D-200	72-53-30
780575	Spacer-Turb, Air Sealing Ring	JT8D-200	72-53-52
780746	Spacer-Compressor, 9 to 10th Stage	JT8D	72-36-13
780771	Spacer, Turbine Rotor	JT8D	72-53-21
780795	Spacer-Compressor, 8 to 9th Stage	JT8D	72-36-12
780796	Spacer-Compressor, 9 to 10th Stage	JT8D	72-36-13
780797	Spacer-Compressor, 10 to 11th Stage	JT8D	72-36-14
780798	Spacer-Compressor, 11 to 12th Stage	JT8D	72-36-15
780799	Spacer-Compressor, 12 to 13th Stage	JT8D	72-36-16
780853	Combustion Chamber	JT8D	72-41-14
780854	Combustion Chamber	JT8D	72-41-14
780909	Case, Diffuser	JT8D	72-37-01
780910	Case, Diffuser	JT8D	72-37-01
780911	Case, Diffuser	JT8D	72-37-01
780912	Case, Diffuser	JT8D	72-37-01
780913	Case, Diffuser	JT8D	72-37-01
780914	Case, Diffuser	JT8D	72-37-01

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

780915	Case, Diffuser	JT8D	72-37-01
780916	Case, Diffuser	JT8D	72-37-01
780917	Case, Diffuser	JT8D	72-37-01
780918	Case, Diffuser	JT8D	72-37-01
780919	Case, Diffuser	JT8D	72-37-01
780920	Case, Diffuser	JT8D	72-37-01
780921	Case, Diffuser	JT8D	72-37-01
780922	Case, Diffuser	JT8D	72-37-01
780923	Case, Diffuser	JT8D	72-37-01
780924	Case, Diffuser	JT8D	72-37-01
780925	Case, Diffuser	JT8D	72-37-01
780926	Case, Diffuser	JT8D	72-37-01
780927	Case, Diffuser	JT8D	72-37-01
780928	Case, Diffuser	JT8D	72-37-01
780929	Case, Diffuser	JT8D	72-37-01
780930	Case, Diffuser	JT8D	72-37-01
781025	Hub, Rear - Rear Compressor	JT8D	72-36-18
781026	Hub, Rear - Rear Compressor	JT8D	72-36-18
781027	Hub, Rear - Rear Compressor	JT8D	72-36-18
781028	Hub, Rear - Rear Compressor	JT8D	72-36-18
781029	Hub, Rear - Rear Compressor	JT8D	72-36-18
781030	Hub, Rear - Rear Compressor	JT8D	72-36-18
781031	Hub, Rear - Rear Compressor	JT8D	72-36-18
781032	Hub, Rear - Rear Compressor	JT8D	72-36-18
781033	Hub, Rear - Rear Compressor	JT8D	72-36-18
781809	Disk-Compressor, 9th Stage	JT8D	72-36-43
781964	Oil Seal Ring, No. 4 Bearing	JT8D	72-37-08
781965	Oil Seal Ring, No. 4 Bearing	JT8D	72-37-08
781966	Oil Seal Ring, No. 4 Bearing	JT8D	72-37-08
782109	Disk-Compressor, 9th Stage	JT8D	72-36-43
782180	Case, Diffuser	JT8D	72-37-01
782209	Disk-Compressor, 9th Stage	JT8D	72-36-43
782229	Air Seal Ring, Turb. - 3rd Stage Outer	JT8D	72-53-60
782309	Disk-Compressor, 9th Stage	JT8D	72-36-43
782868	Support, Turbine Stator	JT8D-200	72-51-01
783038	Case, Diffuser	JT8D	72-37-01
783046	Case, Diffuser	JT8D	72-37-01
783622	Housing Assy, No. 6 Bearing	JT8D-200	72-54-17
783623	Support, Turbine Stator	JT8D	72-51-01
783624	Support, Turbine Stator	JT8D	72-51-01
783768	Case, Turbine Front	JT8D	72-51-02
783914	Case, Diffuser	JT8D	72-37-01
783915	Case, Diffuser	JT8D	72-37-01
783916	Case, Diffuser	JT8D	72-37-01
783917	Case, Diffuser	JT8D	72-37-01
783918	Case, Diffuser	JT8D	72-37-01

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

783919	Case, Diffuser	JT8D	72-37-01
783932	Housing Assy, No. 4 Bearing	JT8D	72-37-07
783933	Housing Assy, No. 4 Bearing	JT8D	72-37-07
783934	Housing Assy, No. 4 Bearing	JT8D	72-37-07
783935	Housing Assy, No. 4 Bearing	JT8D	72-37-07
783936	Housing Assy, No. 4 Bearing	JT8D	72-37-07
783937	Housing Assy, No. 4 Bearing	JT8D	72-37-07
783938	Housing Assy, No. 4 Bearing	JT8D	72-37-07
783939	Housing Assy, No. 4 Bearing	JT8D	72-37-07
783940	Housing Assy, No. 4 Bearing	JT8D	72-37-07
783970	Outlet Duct Assy	JT8D	72-51-15
784024	Duct Assy, Combustion Chamber	JT8D	72-51-15
784029	No. 4 1/2 & 6 Shield and Tube Assy	JT8D	72-53-30
784054	Case, Diffuser	JT8D	72-37-01
784058	Case, Diffuser	JT8D	72-37-01
784059	Case, Diffuser	JT8D	72-37-01
784066	Case, Diffuser	JT8D	72-37-01
784079	Case, Diffuser	JT8D	72-37-01
784087	Case, Diffuser	JT8D	72-37-01
784088	Case, Diffuser	JT8D	72-37-01
784089	Case, Diffuser	JT8D	72-37-01
784090	Case, Diffuser	JT8D	72-37-01
784091	Case, Diffuser	JT8D	72-37-01
784092	Case, Diffuser	JT8D	72-37-01
784097	Case, Diffuser	JT8D	72-37-01
784098	Case, Diffuser	JT8D	72-37-01
784104	Case, Diffuser	JT8D	72-37-01
784106	Case, Diffuser	JT8D	72-37-01
784126	Case, Diffuser	JT8D	72-37-01
784140	Case, Diffuser	JT8D	72-37-01
784141	Case, Diffuser	JT8D	72-37-01
784142	Case, Diffuser	JT8D	72-37-01
784143	Case, Diffuser	JT8D	72-37-01
784144	Case, Diffuser	JT8D	72-37-01
784145	Case, Diffuser	JT8D	72-37-01
784146	Case, Diffuser	JT8D	72-37-01
784147	Case, Diffuser	JT8D	72-37-01
784148	Case, Diffuser	JT8D	72-37-01
784155	Case, Diffuser	JT8D	72-37-01
784157	Case, Diffuser	JT8D	72-37-01
784158	Case, Diffuser	JT8D	72-37-01
784159	Case, Diffuser	JT8D	72-37-01
784160	Case, Diffuser	JT8D	72-37-01
784161	Case, Diffuser	JT8D	72-37-01
784167	Case, Diffuser	JT8D	72-37-01
784185	Case, Diffuser	JT8D	72-37-01

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

784186	Case, Diffuser	JT8D	72-37-01
784187	Case, Diffuser	JT8D	72-37-01
784188	Case, Diffuser	JT8D	72-37-01
784189	Case, Diffuser	JT8D	72-37-01
784190	Case, Diffuser	JT8D	72-37-01
784191	Case, Diffuser	JT8D	72-37-01
784192	Case, Diffuser	JT8D	72-37-01
784193	Case, Diffuser	JT8D	72-37-01
784194	Case, Diffuser	JT8D	72-37-01
784195	Case, Diffuser	JT8D	72-37-01
784196	Case, Diffuser	JT8D	72-37-01
784197	Case, Diffuser	JT8D	72-37-01
784209	Case, Diffuser	JT8D	72-37-01
784210	Case, Diffuser	JT8D	72-37-01
784239	Case, Diffuser	JT8D	72-37-01
784240	Case, Diffuser	JT8D	72-37-01
784241	Case, Diffuser	JT8D	72-37-01
784242	Case, Diffuser	JT8D	72-37-01
784243	Case, Diffuser	JT8D	72-37-01
784244	Case, Diffuser	JT8D	72-37-01
784245	Case, Diffuser	JT8D	72-37-01
784253	Case, Diffuser	JT8D	72-37-01
784254	Case, Diffuser	JT8D	72-37-01
784255	Case, Diffuser	JT8D	72-37-01
784256	Case, Diffuser	JT8D	72-37-01
784257	Case, Diffuser	JT8D	72-37-01
784259	Case, Diffuser	JT8D	72-37-01
784264	Case, Diffuser	JT8D	72-37-01
784265	Case, Diffuser	JT8D	72-37-01
784266	Case, Diffuser	JT8D	72-37-01
784267	Case, Diffuser	JT8D	72-37-01
784268	Case, Diffuser	JT8D	72-37-01
784269	Case, Diffuser	JT8D	72-37-01
784270	Case, Diffuser	JT8D	72-37-01
784271	Case, Diffuser	JT8D	72-37-01
784272	Case, Diffuser	JT8D	72-37-01
784273	Case, Diffuser	JT8D	72-37-01
784274	Case, Diffuser	JT8D	72-37-01
784275	Case, Diffuser	JT8D	72-37-01
784276	Case, Diffuser	JT8D	72-37-01
784277	Case, Diffuser	JT8D	72-37-01
784278	Case, Diffuser	JT8D	72-37-01
784279	Case, Diffuser	JT8D	72-37-01
784280	Case, Diffuser	JT8D	72-37-01
784281	Case, Diffuser	JT8D	72-37-01
784282	Case, Diffuser	JT8D	72-37-01

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

784285	Case, Diffuser	JT8D	72-37-01
784286	Case, Diffuser	JT8D	72-37-01
784287	Case, Diffuser	JT8D	72-37-01
784375	Case, Diffuser	JT8D	72-37-01
784376	Case, Diffuser	JT8D	72-37-01
784377	Case, Diffuser	JT8D	72-37-01
784378	Case, Diffuser	JT8D	72-37-01
784379	Case, Diffuser	JT8D	72-37-01
784380	Case, Diffuser	JT8D	72-37-01
784381	Case, Diffuser	JT8D	72-37-01
784382	Case, Diffuser	JT8D	72-37-01
784383	Case, Diffuser	JT8D	72-37-01
784384	Case, Diffuser	JT8D	72-37-01
784385	Case, Diffuser	JT8D	72-37-01
784386	Case, Diffuser	JT8D	72-37-01
784424	Duct & Fairing Assy	JT8D	72-54-02
784425	Duct & Fairing Assy	JT8D	72-54-02
784426	Duct & Fairing Assy	JT8D	72-54-02
784509	Case, Diffuser	JT8D	72-37-01
784510	Case, Diffuser	JT8D	72-37-01
784511	Case, Diffuser	JT8D	72-37-01
784513	Case, Diffuser	JT8D	72-37-01
784514	Case, Diffuser	JT8D	72-37-01
784515	Case, Diffuser	JT8D	72-37-01
784516	Case, Diffuser	JT8D	72-37-01
784517	Case, Diffuser	JT8D	72-37-01
784518	Case, Diffuser	JT8D	72-37-01
784519	Case, Diffuser	JT8D	72-37-01
784520	Case, Diffuser	JT8D	72-37-01
784670	Case, Turbine Exhaust	JT8D-200	72-54-01
784803	Case, Diffuser	JT8D	72-37-01
784804	Case, Diffuser	JT8D	72-37-01
784806	Case, Diffuser	JT8D	72-37-01
785030	Fan Case, Front	JT8D	72-33-66
785031	Fan Case, Rear	JT8D	72-33-67
785424	Hub, Rear - Rear Compressor	JT8D	72-36-18
785549	Housing Assy, No. 4 Bearing	JT8D	72-37-07
785565	Support, Turbine Stator	JT8D	72-51-01
785566	Support, Turbine Stator	JT8D	72-51-01
785568	Support, Turbine Stator	JT8D	72-51-01
785575	Support, Turbine Stator	JT8D	72-51-01
785576	Support, Turbine Stator	JT8D	72-51-01
785577	Support, Turbine Stator	JT8D	72-51-01
785578	Support, Turbine Stator	JT8D	72-51-01
785579	Support, Turbine Stator	JT8D	72-51-01
785580	Support, Turbine Stator	JT8D	72-51-01

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

785581	Support, Turbine Stator	JT8D	72-51-01
785583	Support, Turbine Stator	JT8D	72-51-01
785584	Support, Turbine Stator	JT8D	72-51-01
785792	Housing Assy, No. 4 Bearing	JT8D	72-37-07
785818	Fan Case, Rear	JT8D	72-33-67
785820	Fan Case, Front	JT8D	72-33-66
785841	Housing Assy, Gearbox Rear	JT8D-200	72-61-01
786217	Case, Diffuser	JT8D	72-37-01
786218	Case, Diffuser	JT8D	72-37-01
786219	Case, Diffuser	JT8D	72-37-01
786220	Case, Diffuser	JT8D	72-37-01
786221	Case, Diffuser	JT8D	72-37-01
786222	Case, Diffuser	JT8D	72-37-01
786223	Case, Diffuser	JT8D	72-37-01
786224	Case, Diffuser	JT8D	72-37-01
786225	Case, Diffuser	JT8D	72-37-01
786226	Case, Diffuser	JT8D	72-37-01
786227	Case, Diffuser	JT8D	72-37-01
786228	Case, Diffuser	JT8D	72-37-01
786229	Case, Diffuser	JT8D	72-37-01
786230	Case, Diffuser	JT8D	72-37-01
786231	Case, Diffuser	JT8D	72-37-01
786232	Case, Diffuser	JT8D	72-37-01
786233	Case, Diffuser	JT8D	72-37-01
786234	Case, Diffuser	JT8D	72-37-01
786235	Case, Diffuser	JT8D	72-37-01
786236	Case, Diffuser	JT8D	72-37-01
786237	Case, Diffuser	JT8D	72-37-01
786238	Case, Diffuser	JT8D	72-37-01
786239	Case, Diffuser	JT8D	72-37-01
786240	Case, Diffuser	JT8D	72-37-01
786241	Case, Diffuser	JT8D	72-37-01
786242	Case, Diffuser	JT8D	72-37-01
786243	Case, Diffuser	JT8D	72-37-01
786244	Case, Diffuser	JT8D	72-37-01
786245	Case, Diffuser	JT8D	72-37-01
786246	Case, Diffuser	JT8D	72-37-01
786247	Case, Diffuser	JT8D	72-37-01
786248	Case, Diffuser	JT8D	72-37-01
786249	Case, Diffuser	JT8D	72-37-01
786250	Case, Diffuser	JT8D	72-37-01
786251	Case, Diffuser	JT8D	72-37-01
786255	Case, Diffuser	JT8D	72-37-01
786256	Case, Diffuser	JT8D	72-37-01
786257	Case, Diffuser	JT8D	72-37-01
786322	Support, Turbine Stator	JT8D-200	72-51-01

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

786408	Hub, Front - Rear Compressor	JT8D	72-36-17
786481	Stator, 1st Stage	JT8D	72-33-51
786483	Housing Assy, No. 4 Bearing	JT8D	72-37-07
786484	Housing Assy, No. 4 Bearing	JT8D	72-37-07
786519	Case, Diffuser	JT8D	72-37-01
786715	Housing Assy, No. 6 Bearing	JT8D-200	72-54-17
786722	Disk-Turbine, 2nd Stage	JT8D	72-53-16
786822	Disk-Turbine, 2nd Stage	JT8D	72-53-16
787008	Hub, Front - Rear Compressor, 8th Stage	JT8D	72-36-42
787204	Ring, Air Seal, Turbine - 2nd Stage	JT8D	72-53-56
787206	Air Seal Ring, Turb. - 4th Stage Outer	JT8D	72-53-61
787208	Hub, Front - Rear Compressor, 8th Stage	JT8D	72-36-42
787222	Disk-Turbine, 2nd Stage	JT8D	72-53-16
787232	Disk-Turbine, 2nd Stage	JT8D	72-53-16
787308	Hub, Front - Rear Compressor, 8th Stage	JT8D	72-36-42
787383	Shroud Assy, 3rd Stage	JT8D	72-53-57
787384	Shroud Assy, 4th Stage	JT8D	72-53-58
787404	Disk-Turbine, 4th Stage	JT8D-200	72-53-18
787408	Hub, Front - Rear Compressor, 8th Stage	JT8D	72-36-42
787483	Shroud Assy, 3rd Stage	JT8D	72-53-57
787484	Shroud Assy, 4th Stage	JT8D	72-53-58
787493	Shroud Assy, 3rd Stage	JT8D	72-53-57
787494	Shroud Assy, 4th Stage	JT8D	72-53-58
787508	Hub, Front - Rear Compressor, 8th Stage	JT8D	72-36-42
787645	Air Seal-Turbine, 4th Stage	JT8D	72-53-28
787753	Case, Diffuser	JT8D	72-37-01
787754	Case, Diffuser	JT8D	72-37-01
787755	Case, Diffuser	JT8D	72-37-01
787756	Case, Diffuser	JT8D	72-37-01
787757	Case, Diffuser	JT8D	72-37-01
787758	Case, Diffuser	JT8D	72-37-01
787759	Case, Diffuser	JT8D	72-37-01
787760	Case, Diffuser	JT8D	72-37-01
787761	Case, Diffuser	JT8D	72-37-01
787762	Case, Diffuser	JT8D	72-37-01
787763	Housing Assy, No. 4 Bearing	JT8D	72-37-07
787765	Support, Turbine Stator	JT8D	72-51-01
787766	Support, Turbine Stator	JT8D	72-51-01
787776	Duct, (TOBI) Turbine Cooling Air	JT8D	72-51-10
787786	No. 4 1/2 & 6 Shield and Tube Assy	JT8D	72-53-30
787787	Housing Assy, No. 4 Bearing	JT8D	72-37-07
787788	Housing Assy, No. 4 Bearing	JT8D	72-37-07
787789	Housing Assy, No. 4 Bearing	JT8D	72-37-07
787792	Stator, 2nd Stage	JT8D	72-33-53
787797	Housing Assy, No. 4 Bearing	JT8D	72-37-07
787798	Housing Assy, No. 4 Bearing	JT8D	72-37-07

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

787799	Housing Assy, No. 4 Bearing	JT8D	72-37-07
788358	Heatshield, Inner-No. 4 & 5 Bearing	JT8D	72-41-01
788608	Hub, Front - Rear Compressor, 8th Stage	JT8D	72-36-42
788708	Hub, Front - Rear Compressor, 8th Stage	JT8D	72-36-42
788732	Ring Assy, Air Seal, 13th Stage	JT8D	72-37-05
788808	Hub, Front - Rear Compressor, 8th Stage	JT8D	72-36-42
788908	Hub, Front - Rear Compressor, 8th Stage	JT8D	72-36-42
788929	Duct, Fan Exhaust Outer Rear	JT8D-200	72-55-04
789408	Hub, Front - Rear Compressor, 8th Stage	JT8D	72-36-42
789447	Air Seal-Turbine, 4th Stage	JT8D-200	72-53-28
789448	Air Seal-Turbine, 4th Stage	JT8D-200	72-53-28
789508	Hub, Front - Rear Compressor, 8th Stage	JT8D	72-36-42
789554	Spacer-Compressor, 3 to 4th Stage	JT8D	72-33-43
789556	Spacer-Compressor, 4 to 5th Stage	JT8D	72-33-44
789608	Hub, Front - Rear Compressor, 8th Stage	JT8D	72-36-42
789746	Spacer-Compressor, 3 to 4th Stage	JT8D	72-33-43
789747	Spacer-Compressor, 3 to 4th Stage	JT8D	72-33-43
789748	Spacer-Compressor, 4 to 5th Stage	JT8D	72-33-44
789749	Spacer-Compressor, 4 to 5th Stage	JT8D	72-33-44
789750	Spacer-Compressor, 4 to 5th Stage	JT8D	72-33-44
789752	Spacer-Compressor, 3 to 4th Stage	JT8D	72-33-43
790530	Fan Case, Rear	JT8D	72-33-67
790531	Fan Case, Front	JT8D	72-33-66
790736	Fan Case, Front	JT8D	72-33-66
790737	Fan Case, Rear	JT8D	72-33-67
790738	Fan Case, Rear	JT8D	72-33-67
790739	Fan Case, Rear	JT8D	72-33-67
790740	Fan Case, Front	JT8D	72-33-66
790741	Fan Case, Front	JT8D	72-33-66
790742	Fan Case, Front	JT8D	72-33-66
790743	Fan Case, Rear	JT8D	72-33-67
790744	Fan Case, Front	JT8D	72-33-66
790745	Fan Case, Rear	JT8D	72-33-67
790746	Fan Case, Front	JT8D	72-33-66
790747	Fan Case, Front	JT8D	72-33-66
790804	Hub, Rear - Front Compressor	JT8D	72-33-35
790832	Disk-Compressor, 2nd Stage	JT8D	72-33-33
791045	Duct Assy, Fan Diffuser, Left	JT8D	72-71-02
791047	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
791304	Disk-Turbine, 4th Stage	JT8D-200	72-53-18
791401	Hub, Front - Front Compressor	JT8D	72-33-31
791501	Hub, Front - Front Compressor	JT8D	72-33-31
791576	Spacer-Turb, Air Sealing Ring	JT8D-200	72-53-52
791601	Hub, Front - Front Compressor	JT8D	72-33-31
791701	Hub, Front - Front Compressor	JT8D	72-33-31
791801	Hub, Front - Front Compressor	JT8D	72-33-31

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

791838	Duct, (TOBI) Turbine Cooling Air	JT8D	72-51-10
791946	Air Seal-Turbine, 4th Stage	JT8D	72-53-28
791947	Air Seal-Turbine, 4th Stage	JT8D	72-53-28
792038	Hub, Front - Rear Compressor, 8th Stage	JT8D	72-36-42
792090	Duct, (TOBI) Turbine Cooling Air	JT8D	72-51-10
792223	Housing Assy, No. 6 Bearing	JT8D	72-54-17
792728	Case, Turbine Front	JT8D	72-51-02
792801	Disk-Turbine, 1st Stage	JT8D	72-52-02
792877	Inner Shield, No. 4 and 5 Bearing	JT8D-200	72-41-02
793073	Duct, (TOBI) Turbine Cooling Air	JT8D	72-51-10
793163	No. 4 1/2 & 6 Shield and Tube Assy	JT8D-200	72-53-30
793935	Retaining Plate, Blade - 1st Stage	JT8D	72-33-15
793937	Retaining Plate, Blade - 1st Stage	JT8D	72-33-15
793946	Case, Diffuser	JT8D	72-37-01
794203	Housing Assy, No. 4 Bearing	JT8D	72-37-07
794602	Air Seal-Turbine, 3rd Stage	JT8D	72-53-27
794791	Duct, (TOBI) Turbine Cooling Air	JT8D	72-51-10
794886	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
794887	Duct Assy, Fan Diffuser, Left	JT8D	72-71-02
794972	Stator, 2nd Stage	JT8D	72-33-53
794974	Stator, 4th Stage	JT8D	72-33-55
794982	Stator, 2nd Stage	JT8D	72-33-53
795059	Air Seal-Turbine, 3rd Stage	JT8D	72-53-27
795147	Duct, (TOBI) Turbine Cooling Air	JT8D	72-51-10
795526	Duct, (TOBI) Turbine Cooling Air	JT8D	72-51-10
795528	Duct, (TOBI) Turbine Cooling Air	JT8D	72-51-10
795603	Disk-Turbine, 3rd Stage	JT8D	72-53-17
796348	Hub, Front - Rear Compressor, 8th Stage	JT8D	72-36-42
796761	Case, Combustion Chamber Outer	JT8D	72-41-11
796766	Spacer-Compressor	JT8D-200	72-36-11
796767	Spacer-Compressor	JT8D-200	72-36-12
796768	Spacer-Compressor	JT8D-200	72-36-13
797096	Heat Shield, No. 5 Bearing	JT8D	72-52-13
797594	Air Seal Ring, Turb. - 3rd Stage Outer	JT8D	72-53-60
797938	Hub, Front - Rear Compressor	JT8D-200	72-36-42
798155	Air Seal-Turbine, 2nd Stage	JT8D-200	72-53-26
798160	Air Seal Ring, Turb. - 2nd Stage Outer	JT8D-200	72-53-59
798162	Air Seal Ring, Turb. - 3rd Stage Outer	JT8D-200	72-53-60
798164	Air Seal Ring, Turb. - 4th Stage Outer	JT8D-200	72-53-61
798170	Housing Assy, No. 4 Bearing	JT8D-200	72-37-07
798189	Air Seal Ring, Turb. - 2nd Stage Outer	JT8D	72-53-59
798235	Duct, (TOBI) Turbine Cooling Air	JT8D	72-51-10
798278	Air Seal Ring, Turb. - 2nd Stage Outer	JT8D	72-53-59
798279	Air Seal Ring, Turb. - 3rd Stage Outer	JT8D	72-53-60
798330	Duct, (TOBI) Turbine Cooling Air	JT8D	72-51-10
798509	Disk-Compressor, 9th Stage	JT8D	72-36-43

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

798512	Disk-Compressor, 12th Stage	JT8D	72-36-46
798630	Liner Segment - Rear Compressor	JT8D-200	72-34-04
798636	Duct Assy, Fan Diffuser	JT8D-200	72-38-01
798808	Air Seal-Turbine, 3rd Stage	JT8D	72-53-27
798841	Support, Turbine Stator	JT8D-200	72-51-01
798968	Spacer, No. 3 Bearing	JT8D	72-34-36
798975	Case, Combustion Chamber Inner	JT8D	72-41-10
799055	Case, Diffuser	JT8D	72-37-01
799056	Case, Diffuser	JT8D	72-37-01
799057	Case, Diffuser	JT8D	72-37-01
799059	Case, Diffuser	JT8D	72-37-01
799060	Case, Diffuser	JT8D	72-37-01
799062	Case, Diffuser	JT8D	72-37-01
799063	Case, Diffuser	JT8D	72-37-01
799064	Case, Diffuser	JT8D	72-37-01
799069	Case, Diffuser	JT8D	72-37-01
799070	Case, Diffuser	JT8D	72-37-01
799504	Hub, Rear - Front Compressor	JT8D	72-33-35
799773	Disk-Compressor, 3rd Stage	JT8D	72-33-34
799865	Support Assy, No. 4 Bearing	JT8D-200	72-37-08
800115	Disk-Compressor, 1.5 Stage	JT8D-200	72-33-32
800398	Duct, (TOBI) Turbine Cooling Air	JT8D-200	72-51-10
800502	No. 4 1/2 & 6 Shield and Tube Assy	JT8D-200	72-53-30
800503	No. 4 1/2 & 6 Shield and Tube Assy	JT8D-200	72-53-30
800538	Case, Turbine Rear	JT8D-200	72-53-51
800804	Disk-Turbine, 4th Stage	JT8D-200	72-53-18
801138	Spacer-Compressor, 3 to 4th Stage	JT8D	72-33-43
801139	Spacer-Compressor, 3 to 4th Stage	JT8D	72-33-43
801143	Spacer-Compressor	JT8D-200	72-36-11
801144	Spacer-Compressor	JT8D-200	72-36-12
801145	Spacer-Compressor	JT8D-200	72-36-13
801148	Spacer-Compressor	JT8D-200	72-36-11
801334	Duct, (TOBI) Turbine Cooling Air	JT8D-200	72-51-10
801931	Air Seal Ring, Turb. - 3rd Stage Outer	JT8D	72-53-60
801933	Support, No. 5 Bearing Seal	JT8D	72-52-11
801968	Duct, (TOBI) Turbine Cooling Air	JT8D-200	72-51-10
802091	Spacer, No. 3 Bearing	JT8D	72-34-36
802097	Air Seal Ring, Turb. - 3rd Stage Outer	JT8D	72-53-60
802105	Disk-Compressor, 5th Stage	JT8D-200	72-33-36
802107	Heatshield, Inner-No. 4 & 5 Bearing	JT8D	72-41-01
802183	Liner Segment - Fan Exhaust, Upper	JT8D-200	72-54-31
802185	Liner Segment - Fan Exhaust, Lower	JT8D-200	72-54-31
802464	Housing Assy, No. 1 Bearing	JT8D	72-23-02
802466	Housing Assy, No. 1 Bearing	JT8D	72-23-02
802522	Disk-Turbine, 2nd Stage	JT8D	72-53-16
802691	Heat Shield, No. 5 Bearing	JT8D	72-52-13

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

802710	Retaining Plate, Blade - 1st Stage	JT8D	72-33-15
802722	Disk-Turbine, 2nd Stage	JT8D	72-53-16
802746	Ring Assy, Air Seal, 13th Stage	JT8D	72-37-05
802806	Fan Case, Rear	JT8D	72-33-67
802812	Air Seal-Turbine, 4th Stage	JT8D	72-53-28
802814	Air Seal-Turbine, 3rd Stage	JT8D	72-53-27
803114	Combustion Chamber	JT8D-200	72-41-14
803115	Combustion Chamber	JT8D-200	72-41-14
803122	Disk-Turbine, 2nd Stage	JT8D	72-53-16
803171	Fan Case, Front	JT8D	72-33-66
803290	Support-Front Accessory Drive	JT8D-200	72-21-01
803569	Support, No. 5 Bearing Seal	JT8D	72-52-11
803605	Support-Front Accessory Drive	JT8D-200	72-21-01
803614	No. 4 1/2 & 6 Shield and Tube Assy	JT8D	72-53-30
803615	No. 4 1/2 & 6 Shield and Tube Assy	JT8D	72-53-30
803616	No. 4 1/2 & 6 Shield and Tube Assy	JT8D	72-53-30
803617	No. 4 1/2 & 6 Shield and Tube Assy	JT8D	72-53-30
803618	No. 4 1/2 & 6 Shield and Tube Assy	JT8D	72-53-30
803619	No. 4 1/2 & 6 Shield and Tube Assy	JT8D-200	72-53-30
803782	Combustion Chamber	JT8D	72-41-14
803783	Combustion Chamber	JT8D	72-41-14
803794	Combustion Chamber	JT8D	72-41-14
803795	Combustion Chamber	JT8D	72-41-14
803912	Plate-Retaining, No. 5 Bearing	JT8D	72-41-22
803913	Disk-Compressor, 13th Stage	JT8D-200	72-36-47
803917	Inner Shield, No. 4 and 5 Bearing	JT8D-200	72-41-02
803919	Inner Shield, No. 4 and 5 Bearing	JT8D-200	72-41-02
803939	Case, Turbine Rear	JT8D-200	72-53-51
803943	Case, Turbine Rear	JT8D-200	72-53-51
803996	Retaining Plate, Blade - 1st Stage	JT8D	72-33-15
804113	Disk-Compressor, 13th Stage	JT8D-200	72-36-47
804211	Case, Turbine Rear	JT8D	72-53-51
804212	Case, Turbine Rear	JT8D	72-53-51
804213	Disk-Compressor, 13th Stage	JT8D	72-36-47
804301	Disk-Turbine, 1st Stage	JT8D	72-52-02
804563	Hub, Rear - Rear Compressor	JT8D-200	72-36-18
804593	Hub, Rear - Rear Compressor	JT8D	72-36-18
804653	Hub, Rear - Rear Compressor	JT8D	72-36-18
804655	Housing Assy, No. 2 Bearing	JT8D	72-34-12
804661	Air Seal-Turbine, 3rd Stage	JT8D-200	72-53-27
804662	Air Seal-Turbine, 4th Stage	JT8D-200	72-53-28
805007	Support Assy, No. 4 Bearing	JT8D-200	72-37-08
805159	Hub, Rear - Rear Compressor	JT8D	72-36-18
805163	Hub, Rear - Rear Compressor	JT8D	72-36-18
805165	Hub, Rear - Rear Compressor	JT8D-200	72-36-18
805340	Spacer, No. 3 Bearing	JT8D	72-34-36

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

805412	Case, Combustion Chamber Outer	JT8D	72-41-11
805770	Support-Front Accessory Drive	JT8D-200	72-21-01
805777	Case, Combustion Chamber Inner	JT8D	72-41-10
806001	Hub, Front - Front Compressor	JT8D	72-33-31
806101	Hub, Front - Front Compressor	JT8D	72-33-31
806473	Guide, Fan & Turbine Exh Duct	JT8D	72-55-10
806593	Spacer-Turb, Air Sealing Ring	JT8D-200	72-53-52
806675	Case, Combustion Chamber Outer	JT8D	72-41-11
806688	Heat Shield, No. 5 Bearing	JT8D	72-52-13
806748	Case, Combustion Chamber Outer	JT8D	72-41-11
806876	Case, Turbine Rear	JT8D-200	72-53-51
806883	Duct, Fan Exhaust Outer	JT8D	72-54-30
807090	Heatshield, Inner-No. 4 & 5 Bearing	JT8D	72-41-01
807278	Seal Assy, No. 3 Bearing	JT8D	72-34-40
807350	Housing Assy, Gearbox Rear	JT8D	72-61-01
807502	Disk-Compressor, 2nd Stage	JT8D	72-33-33
807728	Duct, (TOBI) Turbine Cooling Air	JT8D-200	72-51-10
807749	Case, Turbine Rear	JT8D	72-53-51
807790	Support, Rear-No. 1 Bearing	JT8D	72-23-03
807810	Air Seal Ring, Turb. - 4th Stage Outer	JT8D	72-53-61
807842	Spacer, No. 3 Bearing	JT8D	72-34-36
808009	Fan Case, Front	JT8D	72-33-66
808011	Fan Case And Liner Assy	JT8D	72-33-68
808078	Support, Rear-No. 1 Bearing	JT8D	72-23-03
808113	Liner Segment - Rear Compressor	JT8D-200	72-34-04
808125	Case, Combustion Chamber Outer	JT8D	72-41-11
808145	Retaining Plate, Blade - 1st Stage	JT8D	72-33-15
808173	Case, Diffuser	JT8D	72-37-01
808209	Liner Segment - Rear Compressor	JT8D-200	72-34-04
808225	Fan Case And Liner Assy	JT8D	72-33-68
808230	Fan Case, Front	JT8D	72-33-66
808240	Support, Rear-No. 1 Bearing	JT8D	72-23-03
808243	Support, Rear-No. 1 Bearing	JT8D	72-23-03
808280	Case, Turbine Rear	JT8D-200	72-53-51
808558	Case, Turbine Rear	JT8D	72-53-51
808560	Case, Turbine Rear	JT8D	72-53-51
808636	Case, Turbine Rear	JT8D-200	72-53-51
809017	Ring, Air Seal, Turbine - 2nd Stage	JT8D	72-53-59
809160	Case, Diffuser	JT8D	72-37-01
810512	Guide, Fan & Turbine Exh Duct	JT8D	72-55-10
810628	Duct, (TOBI) Turbine Cooling Air	JT8D-200	72-51-10
810645	Ring Assy, Air Seal, 13th Stage	JT8D-200	72-37-05
811086	Housing Assy, Gearbox Front	JT8D	72-61-02
811087	Housing Assy, Gearbox Front	JT8D-200	72-61-02
811935	Support, No. 5 Bearing Seal	JT8D	72-52-11
811962	Air Seal Ring, Turb. - 3rd Stage Outer	JT8D	72-53-60

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

811967	Air Seal Ring, Turb. - 3rd Stage Outer	JT8D	72-53-60
812024	Guide, Fan & Turbine Exh Duct	JT8D	72-55-10
814854	Case, Diffuser	JT8D	72-37-01
815607	Disk-Compressor, 7th Stage	JT8D	72-36-41
815608	Disk-Compressor, 8th Stage	JT8D	72-36-42
815609	Disk-Compressor, 9th Stage	JT8D	72-36-43
815610	Disk-Compressor, 10th Stage	JT8D	72-36-44
815611	Disk-Compressor, 11th Stage	JT8D	72-36-45
815612	Disk-Compressor, 12th Stage	JT8D	72-36-46
815707	Disk-Compressor, 7th Stage	JT8D-200	72-36-41
815708	Hub, Front - Rear Compressor, 8th Stage	JT8D	72-36-42
815709	Disk-Compressor, 9th Stage	JT8D	72-36-43
815710	Disk-Compressor, 10th Stage	JT8D-200	72-36-44
815711	Disk-Compressor, 11th Stage	JT8D-200	72-36-45
815712	Disk-Compressor, 12th Stage	JT8D-200	72-36-46
815808	Hub, Front - Rear Compressor, 8th Stage	JT8D	72-36-42
815809	Disk-Compressor, 9th Stage	JT8D-200	72-36-43
815965	Air Seal-Turbine, 3rd Stage	JT8D-200	72-53-27
817401	Hub, Front - Front Compressor	JT8D	72-33-31
819133	Duct Guide, Fan & Turb. Exhaust	JT8D	72-54-12
820190	Housing Assy, No. 1 Bearing	JT8D	72-23-02
820501	Hub, Front - Front Compressor	JT8D	72-33-31
821302	Disk-Compressor, 2nd Stage	JT8D	72-33-33
821518	Hub, Rear - Rear Compressor	JT8D-200	72-36-18
832201	Disk-Turbine, 1st Stage	JT8D	72-52-02
844401	Hub, Front - Front Compressor	JT8D	72-33-31
845401	Hub, Front - Front Compressor	JT8D	72-33-31
848001	Hub, Front - Front Compressor	JT8D	72-33-31
848101	Hub, Front - Front Compressor	JT8D	72-33-31
850286	Hub, Rear - Rear Compressor	JT8D	72-36-18
851085	Fan Case And Liner Assy	JT8D	72-33-68
851086	Fan Case And Liner Assy	JT8D	72-33-68
851088	Hub, Front - Rear Compressor	JT8D-200	72-36-42
851108	Hub, Front - Rear Compressor	JT8D-200	72-36-42
855701	Disk-Turbine, 1st Stage	JT8D	72-52-02
856401	Disk-Turbine, 1st Stage	JT8D	72-52-02
856501	Disk-Turbine, 1st Stage	JT8D	72-52-02
856601	Disk-Turbine, 1st Stage	JT8D-200	72-52-02
856701	Disk-Turbine, 1st Stage	JT8D-200	72-52-02
442435-001	Support, No. 5 Bearing Seal	JT8D	72-52-11
493416-002	No. 4 1/2 & 6 Shield and Tube Assy	JT8D	72-53-30
496149-001	Duct Assy, Fan Diffuser, Left	JT8D	72-71-02
496150-001	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
5000184-01	Liner Segment - Rear Compressor	JT8D-200	72-34-04
5000184-02	Liner Segment - Rear Compressor	JT8D-200	72-34-04
5000186-01	Liner Segment - Rear Compressor	JT8D-200	72-34-04

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

5000186-02	Liner Segment - Rear Compressor	JT8D-200	72-34-04
5000415-01	Disk-Compressor, 1.5 Stage	JT8D-200	72-33-32
5000415-02	Disk-Compressor, 1.5 Stage	JT8D-200	72-33-32
5000415-03	Disk-Compressor, 1.5 Stage	JT8D-200	72-33-32
5000449-01	Combustion Chamber	JT8D-200	72-41-14
5000449-02	Combustion Chamber	JT8D-200	72-41-14
5000449-05	Combustion Chamber	JT8D-200	72-41-14
5000450-01	Combustion Chamber	JT8D-200	72-41-14
5000450-026	Combustion Chamber	JT8D-200	72-41-14
5000450-05	Combustion Chamber	JT8D-200	72-41-14
5000450-06	Combustion Chamber	JT8D-200	72-41-14
5000480-021	Support, Turbine Stator	JT8D	72-51-01
5000480-03	Support, Turbine Stator	JT8D-200	72-51-01
5000480-04	Support, Turbine Stator	JT8D	72-51-01
5000907-01	Disk-Compressor, 7th Stage	JT8D-200	72-36-41
5000922-01	Spacer-Compressor	JT8D-200	72-36-11
5000947-01	Shaft, Turb - Rear Comp Drive (T1)	JT8D	72-52-03
5001080-01	Duct Segment, Fan Exh, Upper, Rear	JT8D	72-55-08
5001081-01	Duct Segment, Fan Exh, Lower, Rear	JT8D	72-55-08
5001647-01	Ring Assy, Air Seal, 13th Stage	JT8D	72-37-05
5001798-01	Air Seal Ring, Turb. - 3rd Stage Outer	JT8D	72-53-60
5001815-01	Disk-Compressor, 1.5 Stage	JT8D-200	72-33-32
5001844-01	Spacer-Turb, Air Sealing Ring	JT8D-200	72-53-52
5001946-01	Duct, Fan Exhaust Outer Rear	JT8D-200	72-55-05
5001946-04	Duct, Fan Exhaust Outer Rear	JT8D-200	72-55-05
5002233-01	Support, Turbine Stator	JT8D	72-51-01
5002235-01	Support, Turbine Stator	JT8D	72-51-01
5002235-02	Support, Turbine Stator	JT8D	72-51-01
5002235-021	Support, Turbine Stator	JT8D	72-51-01
5002349-01	Ring, Air Seal, Turbine - 3rd Stage	JT8D	72-53-57
5002350-01	Ring, Air Seal, Turbine - 4th Stage	JT8D	72-53-58
5002572-01	Stator, 2nd Stage	JT8D	72-33-53
5002648-01	Duct, (TOBI) Turbine Cooling Air	JT8D-200	72-51-10
5002683-01	Shroud Assy, 3rd Stage	JT8D	72-53-57
5002684-01	Shroud Assy, 4th Stage	JT8D	72-53-58
5002905-01	Disk-Compressor, 5th Stage	JT8D-200	72-33-36
5002947-01	Air Seal-Turbine, 2nd Stage	JT8D	72-53-26
5002947-021	Air Seal-Turbine, 2nd Stage	JT8D	72-53-26
5002948-01	Air Seal-Turbine, 3rd Stage	JT8D	72-53-27
5002949-01	Air Seal-Turbine, 4th Stage	JT8D	72-53-28
5003103-01	Disk-Turbine, 3rd Stage	JT8D	72-53-17
5003104-01	Disk-Turbine, 4th Stage	JT8D	72-53-15
5003444-01	Fan Case, Rear	JT8D	72-33-67
5003446-01	Fan Case, Front	JT8D	72-33-66
5003446-02	Fan Case, Front	JT8D	72-33-66
5003530-01	Ring, Air Seal, Turbine - 2nd Stage	JT8D	72-53-56

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

5003530-021	Ring, Air Seal, Turbine - 2nd Stage	JT8D	72-53-59
5003531-01	Ring, Air Seal, Turbine - 3rd Stage	JT8D	72-53-57
5003532-01	Ring, Air Seal, Turbine - 4th Stage	JT8D	72-53-58
5003534-01	Support, Rear-No. 1 Bearing	JT8D	72-23-03
5003538-01	Case, Turbine Rear	JT8D	72-53-51
5003538-021	Case, Turbine Rear	JT8D	72-53-51
5003601-01	Disk-Turbine, 1st Stage	JT8D	72-52-02
5003601-021	Disk-Turbine, 1st Stage	JT8D	72-52-02
5003603-01	Air Seal Ring, Turb. - 4th Stage Outer	JT8D	72-53-61
5003613-01	Disk-Compressor, 13th Stage	JT8D	72-36-47
5003656-01	Air Seal Ring, Turb. - 2nd Stage Outer	JT8D	72-36-59
5003658-01	Air Seal Ring, Turb. - 4th Stage Outer	JT8D	72-53-61
5003746-01	Hub-Turbine, 4th Stage	JT8D	72-53-19
5003746-02	Hub-Turbine, 4th Stage	JT8D	72-53-19
5004021-01	Seal Assy, No. 4 Bearing	JT8D-200	72-36-80
5004021-02	Air Seal Ring, No. 4 Bearing	JT8D	72-36-80
5004022-01	Disk-Turbine, 2nd Stage	JT8D	72-53-16
5004027-01	Duct Assy, Fan & Turb. Exhaust	JT8D	72-55-02
5004027-02	Duct Assy, Fan & Turb. Exhaust	JT8D	72-55-02
5004028-01	Guide, Fan & Turbine Exh Duct	JT8D	72-55-10
5004028-02	Guide, Fan & Turbine Exh Duct	JT8D	72-55-10
5004049-01	Support, Turbine Stator	JT8D	72-51-01
5004049-02	Support, Turbine Stator	JT8D	72-51-01
5004049-021	Support, Turbine Stator	JT8D	72-51-01
5004049-022	Support, Turbine Stator	JT8D	72-51-01
5004049-023	Support, Turbine Stator	JT8D	72-51-01
5004049-03	Support, Turbine Stator	JT8D	72-51-01
5004049-031	Support, Turbine Stator	JT8D	72-51-01
5004049-032	Support, Turbine Stator	JT8D	72-51-01
5004049-033	Support, Turbine Stator	JT8D	72-51-01
5004301-01	Disk-Turbine, 1st Stage	JT8D	72-52-02
5004307-01	Spacer-Compressor, 7 to 8th Stage	JT8D	72-36-11
5004307-02	Spacer-Compressor, 7 to 8th Stage	JT8D	72-36-11
5004307-03	Spacer-Compressor, 8 to 9th Stage	JT8D	72-36-12
5004307-04	Spacer-Compressor, 8 to 9th Stage	JT8D	72-36-12
5004307-05	Spacer-Compressor, 7 to 8th Stage	JT8D	72-36-11
5004307-06	Spacer-Compressor, 7 to 8th Stage	JT8D	72-36-11
5004307-07	Spacer-Compressor, 8 to 9th Stage	JT8D	72-36-12
5004307-08	Spacer-Compressor, 8 to 9th Stage	JT8D	72-36-12
5004307-09	Spacer-Compressor, 7 to 8th Stage	JT8D	72-36-11
5005201-01	Disk-Turbine, 1st Stage	JT8D	72-52-02
5005325-01	Duct, (TOBI) Turbine Cooling Air	JT8D	72-51-10
5005325-021	Duct, (TOBI) Turbine Cooling Air	JT8D	72-51-10
5005392-01	Fan Case, Rear	JT8D	72-33-67
5005394-02	Fan Case, Front	JT8D	72-33-66
5005599-01	Duct Assy, Fan Diffuser	JT8D-200	72-38-01

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

5005613-01	Disk-Compressor, 13th Stage	JT8D-200	72-36-47
5005769-01	Housing Assy, No. 4 Bearing	JT8D	72-37-07
5005773-01	Support, Rear-No. 1 Bearing	JT8D	72-23-03
5005951-01	Stator, 1st Stage	JT8D	72-33-51
5006007-01	Disk-Compressor, 7th Stage	JT8D-200	72-36-41
5006007-02	Disk-Compressor, 7th Stage	JT8D	72-36-41
5006101-01	Disk-Turbine, 1st Stage	JT8D	72-52-02
5006181-01	Duct, Fan Exhaust Outer	JT8D	72-54-30
5006232-01	Duct Guide, Fan & Turb. Exhaust	JT8D	72-54-12
5006376-01	Duct, Fan Exhaust Outer Rear	JT8D-200	72-55-05
5006471-01	Stator, 1st Stage	JT8D	72-33-51
5006586-01	Housing Assy, No. 4 Bearing	JT8D	72-37-07
5006586-021	Housing Assy, No. 4 Bearing	JT8D	72-37-07
504027-001	Duct Assy, Fan Diffuser, Left	JT8D	72-71-02
511216-002	No. 4 1/2 & 6 Shield and Tube Assy	JT8D	72-53-30
537625-001	Housing Assy, Gearbox Rear	JT8D	72-61-01
538604-002	Housing Assy, Gearbox Rear	JT8D	72-61-01
538636-002	Housing Assy, Gearbox Rear	JT8D	72-61-01
539770-002	Housing Assy, Gearbox Rear	JT8D	72-61-01
545123-001	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
547448-001	Air Seal-Turbine, 3rd Stage	JT8D	72-53-27
547448-002	Air Seal-Turbine, 3rd Stage	JT8D	72-53-27
554815-001	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
564908-001	Housing Assy, Gearbox Rear	JT8D	72-61-01
564909-001	Housing Assy, Gearbox Rear	JT8D	72-61-01
666654-001	Housing Assy, Gearbox Rear	JT8D	72-61-01
666655-001	Housing Assy, Gearbox Rear	JT8D	72-61-01
692986-001	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
697488-001	Housing Assy, Gearbox Rear	JT8D	72-61-01
750346-001	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
754925-001	Duct Assy, Fan Diffuser, Right	JT8D	72-71-02
800754-01	Liner Segment - Rear Compressor	JT8D-200	72-34-04
803142-01	Liner Segment - Rear Compressor	JT8D-200	72-34-04
803143-01	Liner Segment - Rear Compressor	JT8D-200	72-34-04
803276-01	Liner Segment - Rear Compressor	JT8D-200	72-34-01
803277-01	Liner Segment - Rear Compressor	JT8D-200	72-34-04
803658-01	Duct, Fan Exhaust Inner Duct Segments	JT8D	72-54-81
803750-001	Housing Assy, Gearbox Rear	JT8D	72-61-01
804211-001	Case, Turbine Rear	JT8D	72-53-51
804212-001	Case, Turbine Rear	JT8D	72-53-51
804212-002	Case, Turbine Rear	JT8D	72-53-51
805173-01	Liner Segment - Rear Compressor	JT8D-200	72-34-04
805175-01	Liner Segment - Rear Compressor	JT8D-200	72-34-04
805369-01	Duct Segment, Fan Turbine Inner	JT8D	72-71-05
805412-001	Case, Combustion Chamber Outer	JT8D	72-41-11
805412-002	Case, Combustion Chamber Outer	JT8D	72-41-11

JETAIR SUPPORT, INC.

CAPABILITY LIST

JT8D and JT8D-200

805976-01	Duct Assy, Fan & Turb. Exhaust	JT8D	72-55-02
806125-01	Duct Assy, Fan & Turb. Exhaust	JT8D	72-55-02
806131-01	Duct Assy, Fan Exhaust, Outer	JT8D	72-55-04
806618-01	Duct Assy, Fan & Turb. Exhaust	JT8D	72-55-02
808125-001	Case, Combustion Chamber Outer	JT8D	72-41-11
808125-002	Case, Combustion Chamber Outer	JT8D	72-41-11
808149-01	Duct Assy, Fan Exhaust, Outer	JT8D	72-55-04
808157-01	Duct Assy, Fan Exhaust, Outer	JT8D	72-55-04
808158-01	Case, Turbine Rear	JT8D-200	72-53-51
808562-01	Case, Turbine Rear	JT8D-200	72-53-51
809013-01	Air Seal Ring, Turb. - 4th Stage	JT8D-200	72-53-58
809016-01	Air Seal Ring, Turb. - 3rd Stage	JT8D-200	72-53-57
809017-01	Ring, Air Seal, Turbine - 2nd Stage	JT8D	72-53-59
809019-01	Duct, Fan Exhaust Inner Duct Segments	JT8D	72-54-81
810510-01	Duct Segment, Fan Exh, Upper, Rear	JT8D	72-55-08
810511-01	Duct Segment, Fan Exh, Lower, Rear	JT8D	72-55-08
810657-01	Duct Assy, Fan Exhaust, Outer	JT8D	72-55-04
811171-01	Stator, 1st Stage	JT8D	72-33-51
811626-01	Duct, Fan Exhaust Inner Duct Segments	JT8D	72-54-81
811999-01	Duct Segment, Fan Exh, Upper, Rear	JT8D	72-55-08
812023-01	Duct Segment, Fan Exh, Lower, Rear	JT8D	72-55-08
812167-01	Duct Segment, Fan Exh, R, Rear	JT8D	72-55-08
812170-01	Duct Segment, Fan Exh, Upper, Rear	JT8D	72-55-08
812174-01	Duct Segment, Fan Exh, Lower, Rear	JT8D	72-55-08
812178-01	Duct Segment, Fan Exh, Upper, Rear	JT8D	72-55-08
812183-01	Duct Segment, Fan Exh, Lower, Rear	JT8D	72-55-08
815399-01	Case, Turbine Rear	JT8D-200	72-53-51
819774-01	Duct Assy, Fan & Turb. Exhaust	JT8D	72-55-02
819827-01	Duct Assy, Fan & Turb. Exhaust	JT8D	72-55-02
819828-01	Duct Assy, Fan & Turb. Exhaust	JT8D	72-55-02
819829-01	Duct Assy, Fan & Turb. Exhaust	JT8D	72-55-02
820249-01	Case, Turbine Rear	JT8D-200	72-53-51
820325-01	Duct Assy, Fan Diffuser	JT8D-200	72-38-01